

DPS CONTROL UNIT, fitting instruction	$\overline{}$	Model	Code	Page
	18.06.1997	6000-8400	39.21	1(3)

## 

The earlier type control unit no 32861200 (tractors up to no 668102), will be replaced with a new unit no 33027100 and with an extra wire loom. The kit incl. also new fastening parts.

In connection with the unit change, the following functions are added:

- sound signal for applied hand brake
- sound signal for head lights

## FITTING:

- Disconnect the battery earth lead.
- Remove the dash board plate round the instruments.
   Push the connector end "A9" of the wire loom.
  - Push the connector end "A9" of the wire loom 33031100 into the steering wheel console from lower part upwards.
- Part the connector "A9" halves of the display unit and connect the wire loom 33031100 corresponding connector between the connector halves.
- Release the floor mat in the cab RH side front part and the lower end protection of the gear levers.
  - Remove the earlier control unit (32861200). Remove the power lift switch panel. Unscrew the panel housing bottom nut. Loosen the door seal at the rear mudguard.
- Draw the wire loom 33031100 together with other cables along the floor into the lower end of the lever housing. Bind the cable together with the other cables.
- Connect the connector "A10" (in the cab wire loom to the loosened control unit) onto the new wire loom.
- Draw the new wire loom under the mudguard upholstery into the power lift switch panel housing (a hole for wires is ready—made).
- Fasten parts 29-36 onto the switch panel.
   Connect connector "(A10)" to the control unit circuit card and refit the cover. Fasten other removed parts.
- Check the function of the DPS and the sound signals of the hand brake and head lights:
  - Alarm buzzer starts to alarm continuously, if the engine is stopped and the parking brake is not applied.
  - \* If the engine is started without releasing the hand brake, the buzzer alarms brokenly.
  - \* If the head lights are on after the current is switched off, the buzzer alarms brokenly.



DPS CONTROL UNIT, fitting instruction		Model	Code	Page	
	18.06.1997	6000-8400	39.21	1(3)	

## 

The earlier type control unit no 32861200 (tractors up to no 668102), will be replaced with a new unit no 33027100 and with an extra wire loom. The kit incl. also new fastening parts.

In connection with the unit change, the following functions are added:

- sound signal for applied hand brake
- sound signal for head lights


## FITTING:

- Disconnect the battery earth lead.
- Remove the dash board plate round the instruments.
  - Push the connector end "A9" of the wire loom 33031100 into the steering wheel console from lower part upwards.
- Part the connector "A9" halves of the display unit and connect the wire loom 33031100 corresponding connector between the connector halves.
- Release the floor mat in the cab RH side front part and the lower end protection of the gear levers.
  - Remove the earlier control unit (32861200). Remove the power lift switch panel. Unscrew the panel housing bottom nut. Loosen the door seal at the rear mudguard.
- Draw the wire loom 33031100 together with other cables along the floor into the lower end of the lever housing. Bind the cable together with the other cables.
- Connect the connector "A10" (in the cab wire loom to the loosened control unit) onto the new wire loom.
- Draw the new wire loom under the mudguard upholstery into the power lift switch panel housing (a hole for wires is ready—made).
- Fasten parts 29-36 onto the switch panel.
   Connect connector "(A10)" to the control unit circuit card and refit the cover. Fasten other removed parts.
- Check the function of the DPS and the sound signals of the hand brake and head lights:
  - \* Alarm buzzer starts to alarm continuously, if the engine is stopped and the parking brake is not applied.
  - \* If the engine is started without releasing the hand brake, the buzzer alarms brokenly.
  - \* If the head lights are on after the current is switched off, the buzzer alarms brokenly.



DPS CONTROL UNIT, fitting	$\geq$	Model	Code	Page
	18.06.1997	6000-8400	39.21	2(3)

	1	33464200	Asennussarja	Ditsättn. sats	Fitting kit	Einbausatz
29	1	33027100	.Ohjain	Styrning	Guide	Führung
	1	33031100	.Johdinsarja	Ledningssats	Wiring set	Verkabelung
30	1	33030500	.Kannatin .Aluslaatta .Ruuvi .Ruuvi .Aluslaatta .Mutteri .Rengas	Hållare	Support	Halter
31	4	JD0405		Bricka	Washer	Scheibe
32	4	HN6807		Skruv	Screw	Schraube
33	4	HD8002		Skruv	Screw	Schraube
34	4	JD0404		Bricka	Washer	Scheibe
35	4	JB8901		Mutter	Nut	Mutter
36	8	32518100		Ring	Ring	Ring

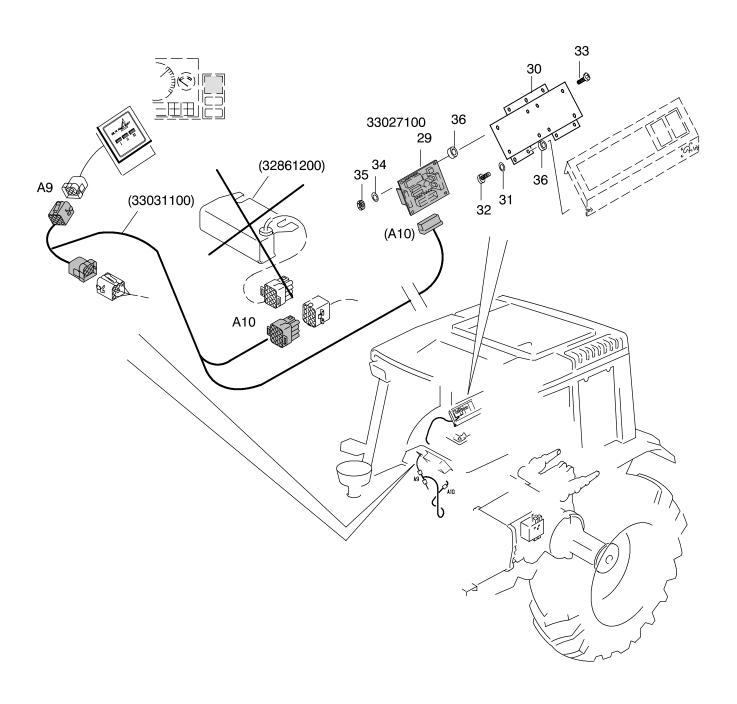



DPS CONTROL UNIT, fitting

18.06.1997

6000-8400

Model

39.21

Code

3(3)

Page

