

FENDT 900 Vario COM III

919 .. 0101-
922 .. 0101-
925 .. 0101-
928 .. 0101-
931 .. 0101-
934 .. 0101-



M000282

- English



Issue
04/2008


PSD Schr - 3367G

AGCO GmbH

Johann-Georg-Fendt-Str. 4 D-87616 Marktoberdorf

Installation kit: Auto-Guide preparation (0 054.165.100.000)

Assembly Instructions

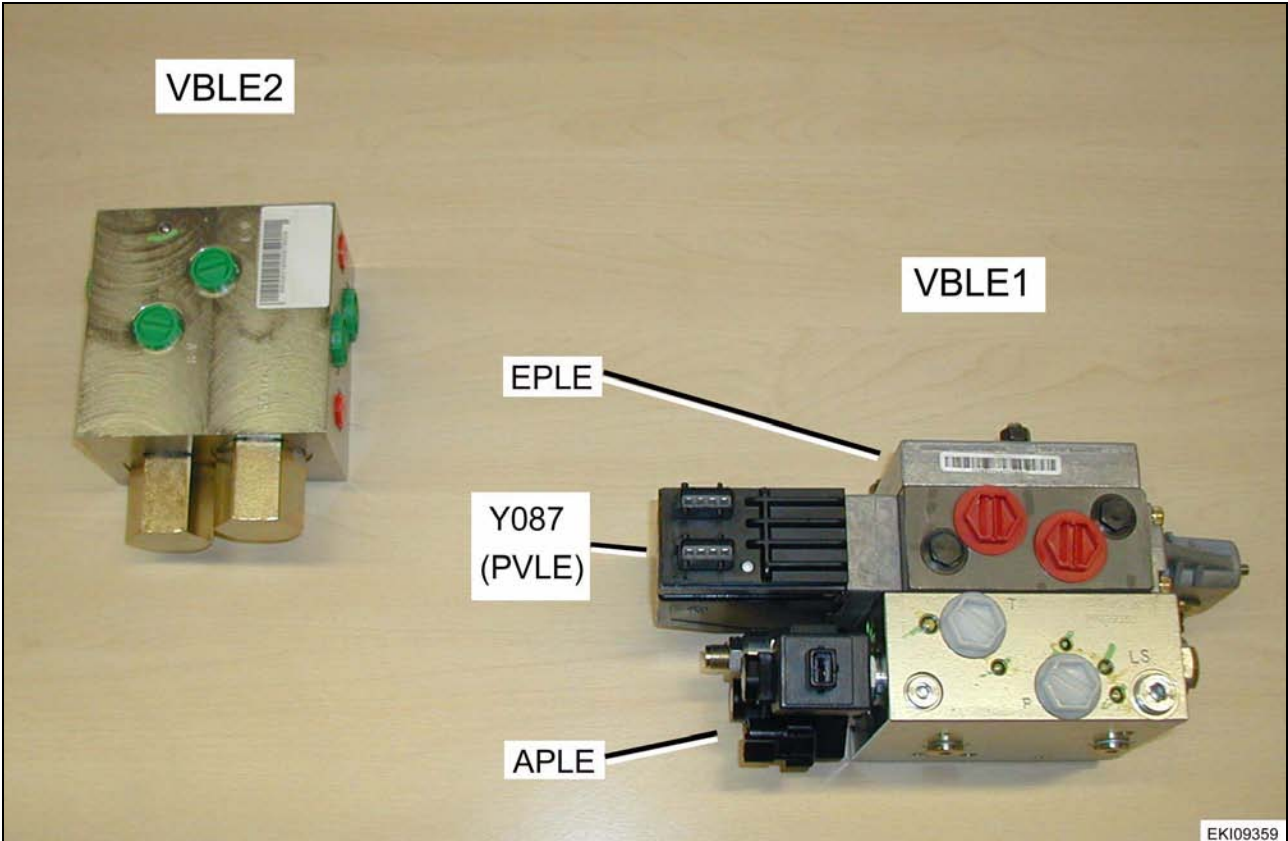


EKI09359
1006025



EKI09360
1006026



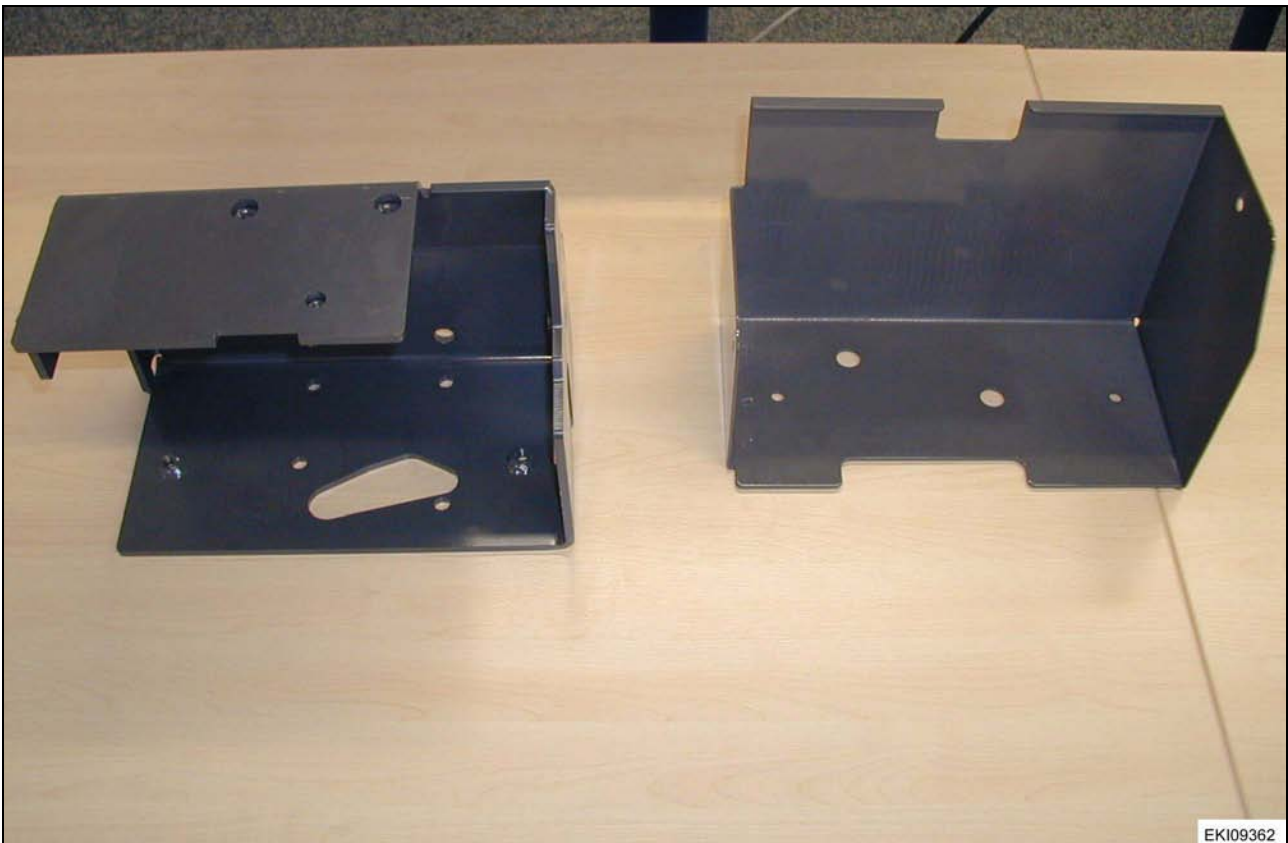

EKI09362
1006029



EKI09358
1006030

931.402.090.101




EKI09514
1006795

Clamping ring

NOTE:

The clamping ring is used to secure the B081 sensor

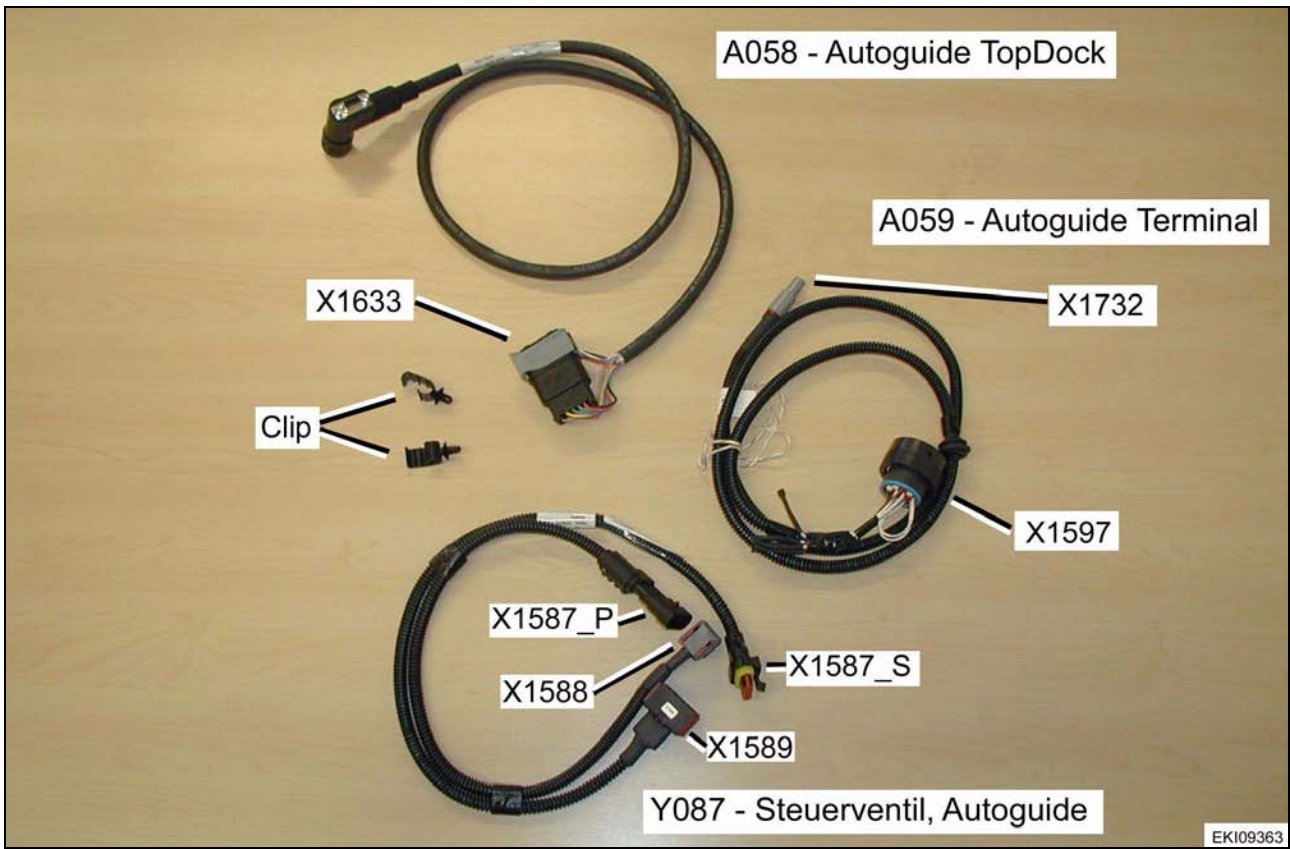

EKI09363
1006031

Preliminary work

NOTE:

When working on hydraulic systems, cleanliness is of paramount importance.




EK109398
1006482



Preliminary work

- Safely jack up the tractor.
- Remove right rear wheel.
- Remove metal panel.
- Remove right fuel tank.

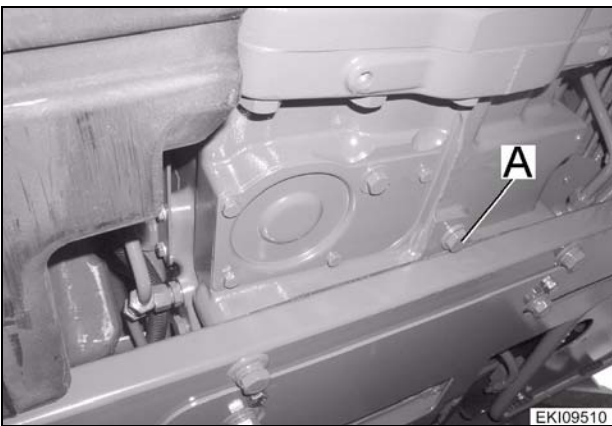

EK109510
1006780



Drain hydraulic oil.

- Place an oil collection container (approx. 90 l) underneath the hydraulic tank.
- Remove oil drain plug (A) and allow the oil to drain.
- Clean the oil drain plug (A), screw back in and tighten.



EK109399
1006483



Loosen the wiring harness.



EK109400
1006484



Put wiring harness to one side.




EKI09401
1006485



Remove retainer

Remove hydraulic piping (where present)

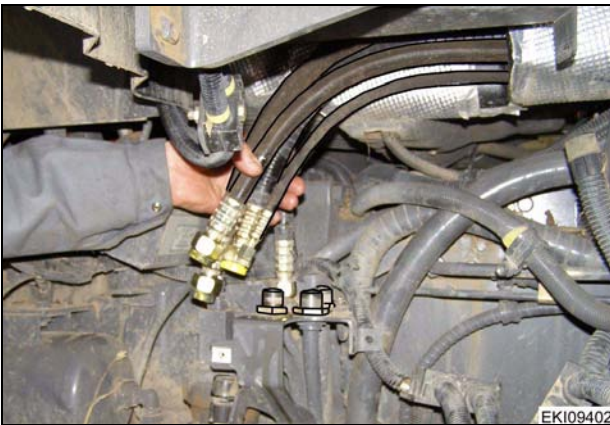

EKI09402
1006486



Mark the hydraulic hoses for the steering system and unscrew at the cab separation point.



EKI09403
1006487



Remove pipe clamp.



EKI09405
1006489



To provide access:
 Remove pipe clamp.



EKI09406
1006490



Unscrew pressure pipe at central control block (ZSB).



EKI09407
1006491



Unscrew hydraulic pipe and put pressure pipe to one side.



EKI09404
1006488




Unscrew **hydraulic pipe (steering)**.



EKI09408
1006492



Unthread **hydraulic pipe (steering)**.

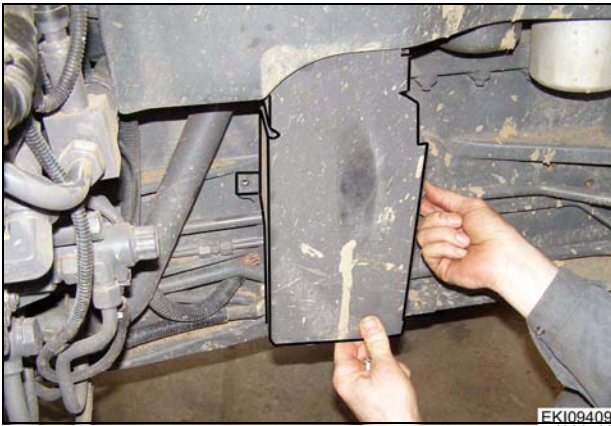

EKI09409
1006493



Remove guard.



EKI09410
1006494



Remove pipe clamp.



EKI09411
1006495



Unscrew **hydraulic pipe (steering)**.



EKI09412
1006496



To provide access:
 Unscrew compressed air pipe and put to one side.



EKI09413
1006497



Unthread **hydraulic pipe (steering)**.



EKI09415
1006499



Unscrew **Load Sensing pipe (steering)**.



EKI09414
1006498



Remove pipe clamp.



EKI09416
1006500




Unthread **Load Sensing pipe (steering)**.



EKI09425
1006548



To provide access:
 Unscrew hydraulic pipe and put to one side.

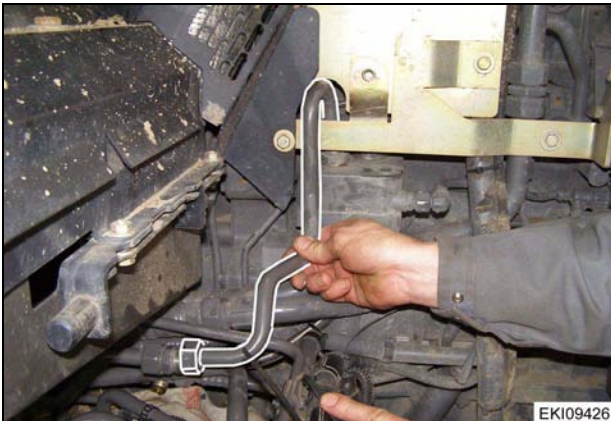

EKI09426
1006550



Remove pressure pipe (compressed air).



EKI09427
1006552



Unscrew hydraulic pipe.



EKI09424
1006546




Unscrew **hydraulic pipe (p line)** on central control unit (ZSB).



Unthread **hydraulic pipe (p line)**.


Install hydraulic piping

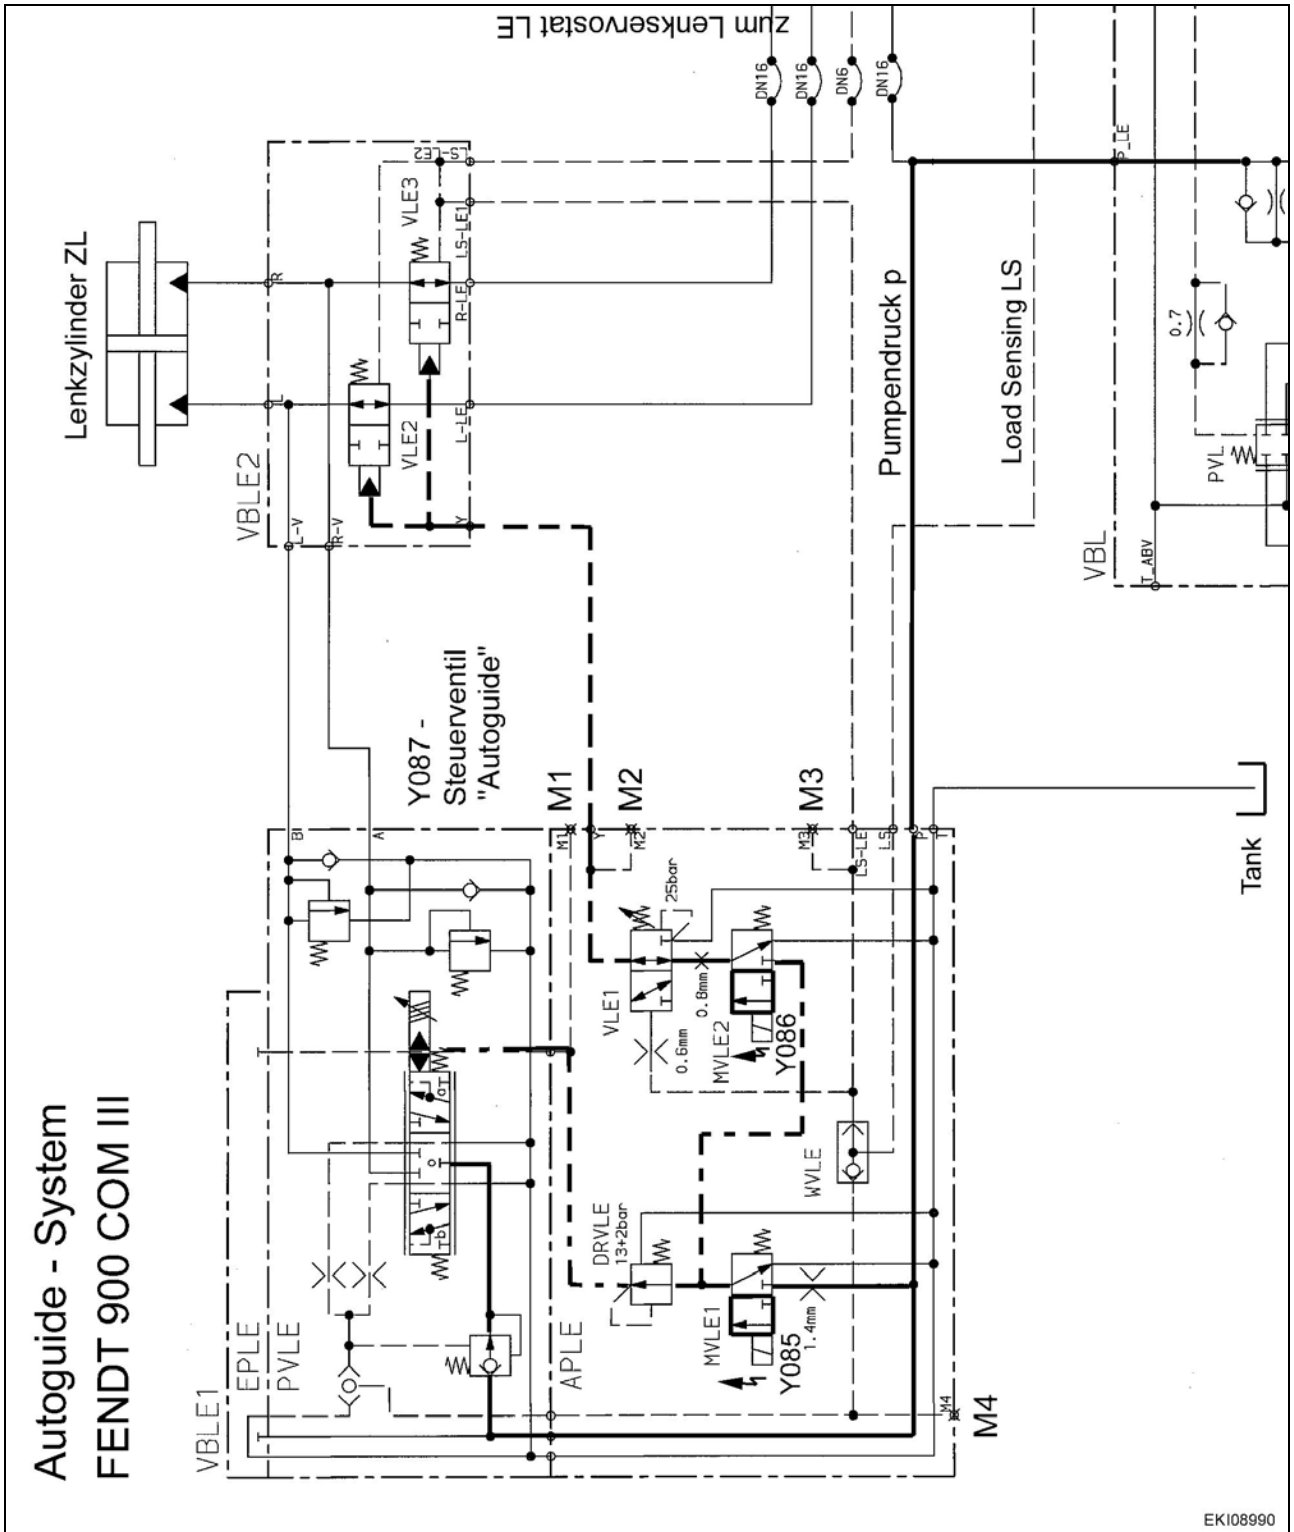

EKI08990
1003516

Assembly Instructions

FENDT 900 Vario COM III

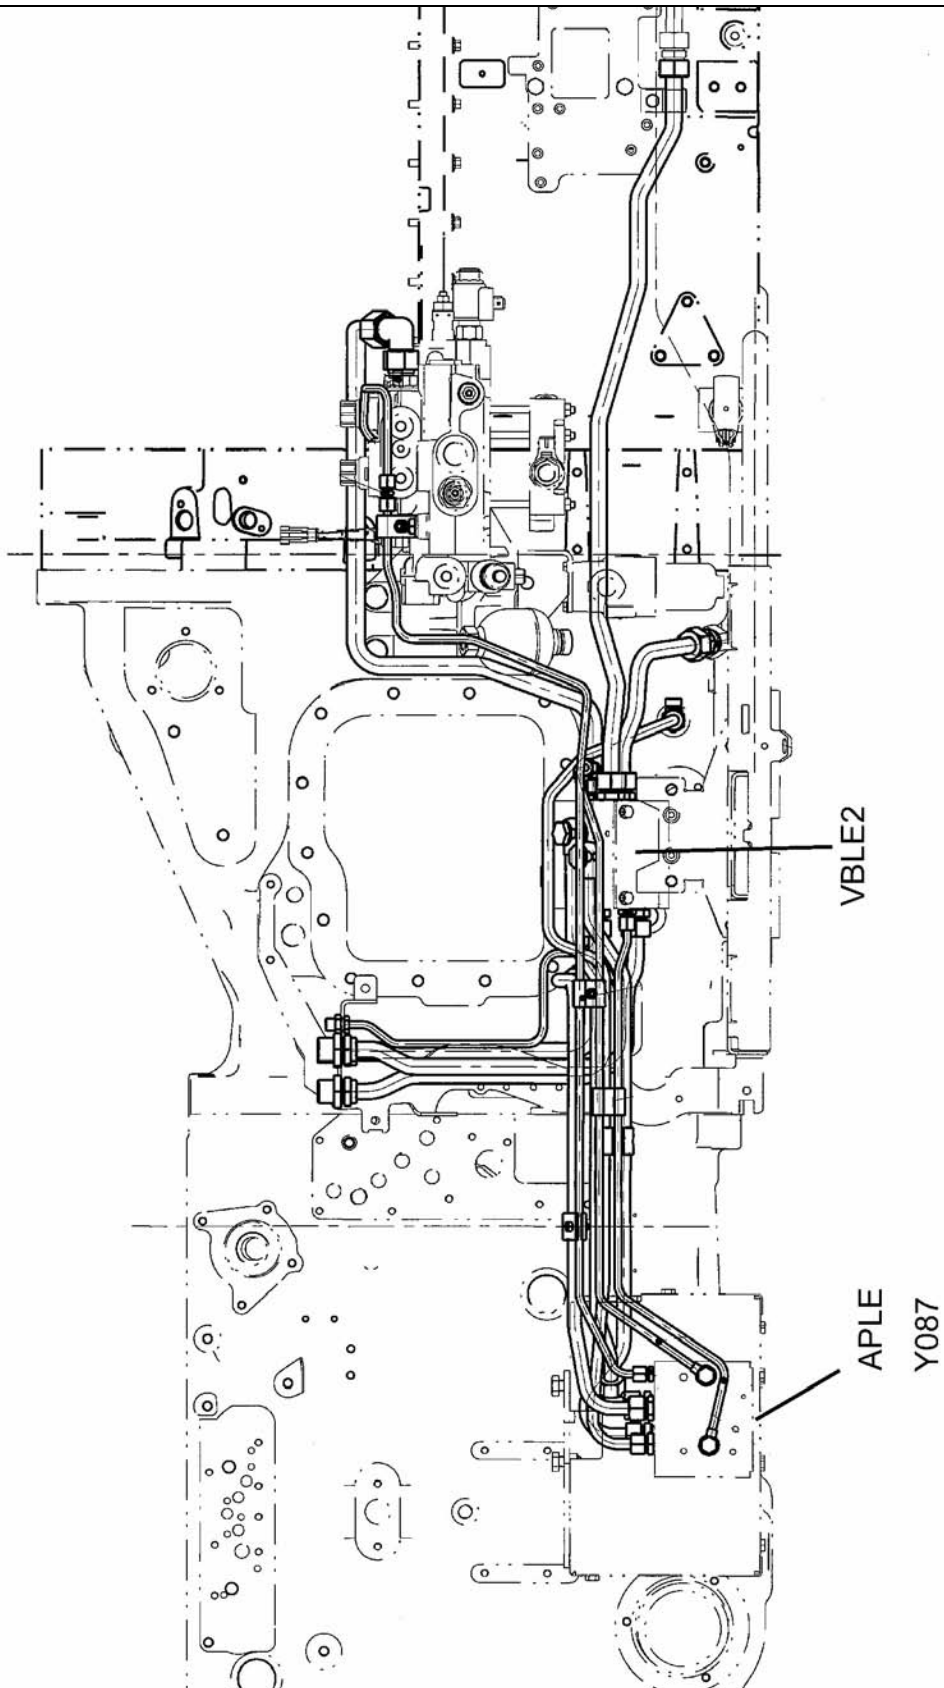


EK109289


Autoguide - System

931.952.400.000

1005850

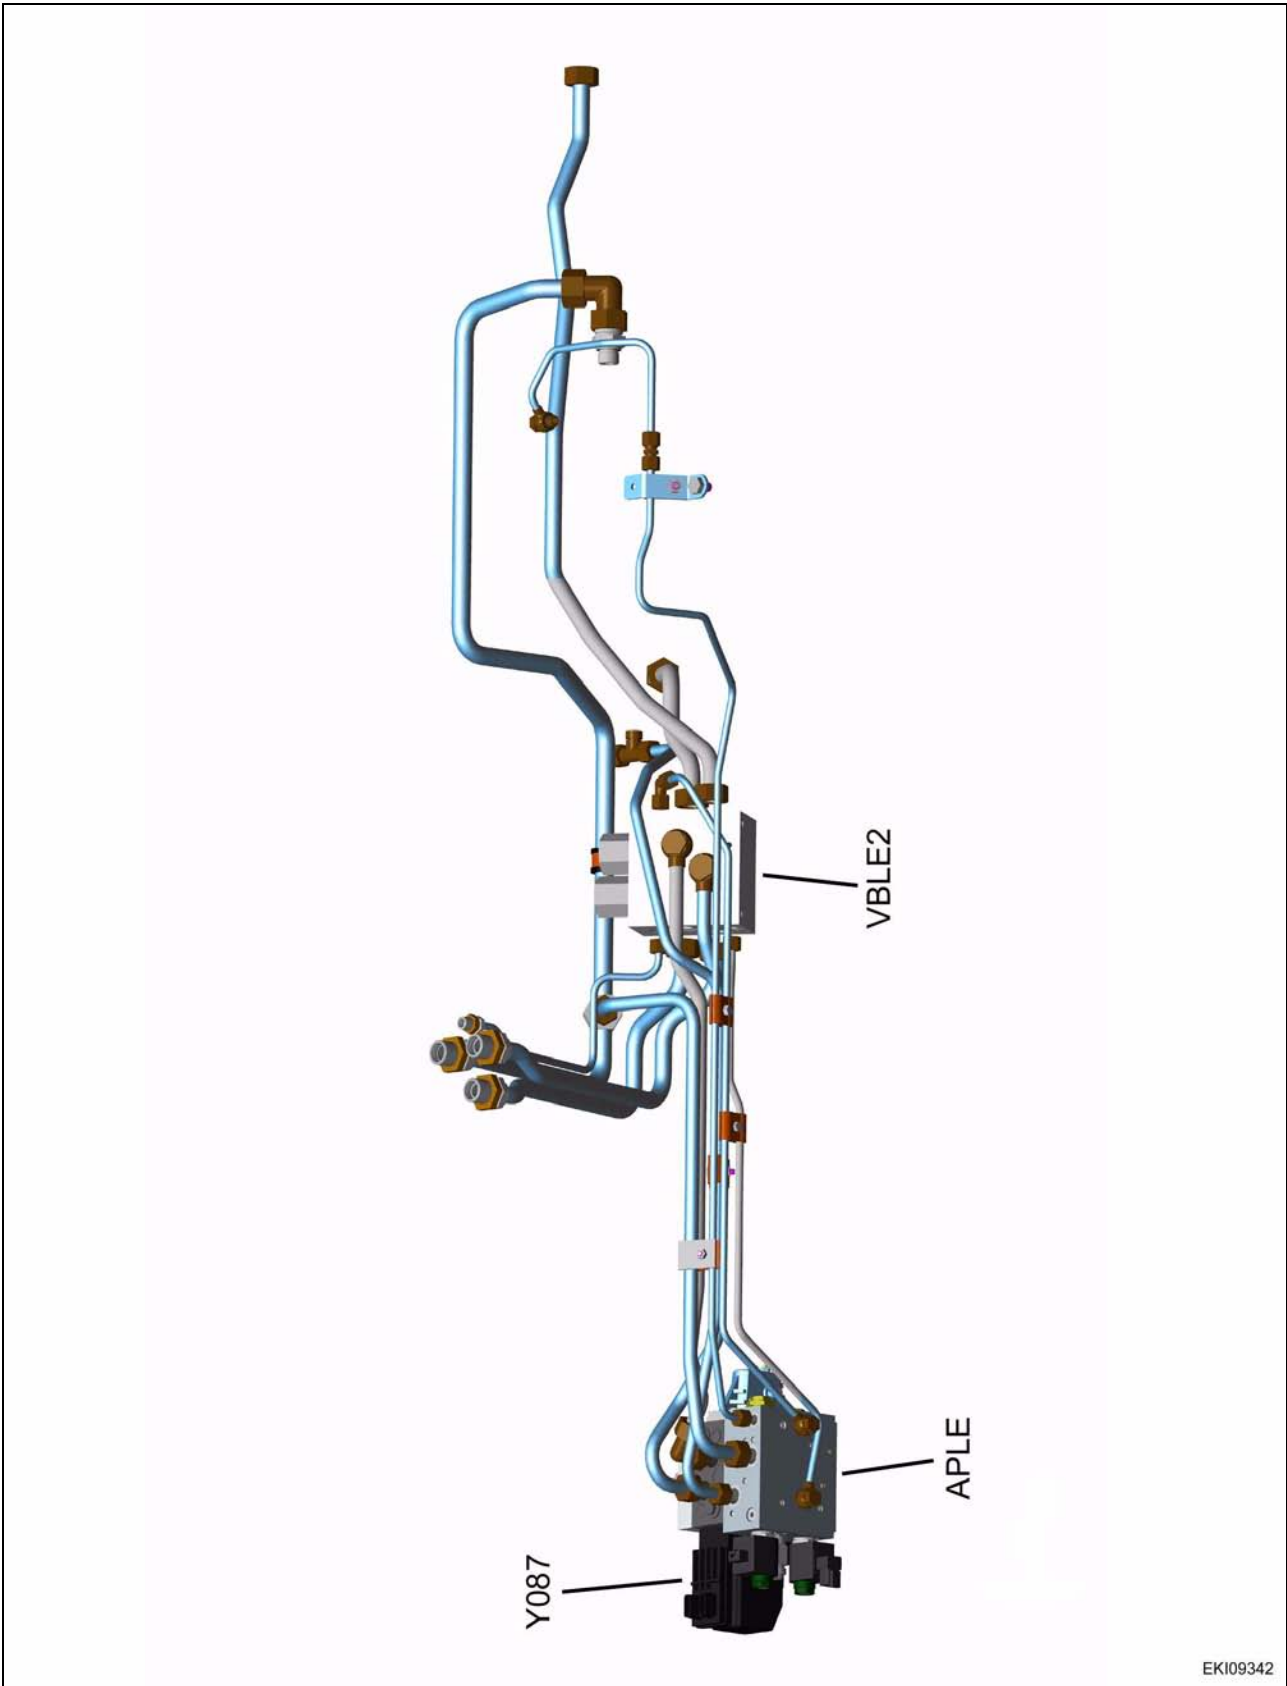

EKI09342
1005848

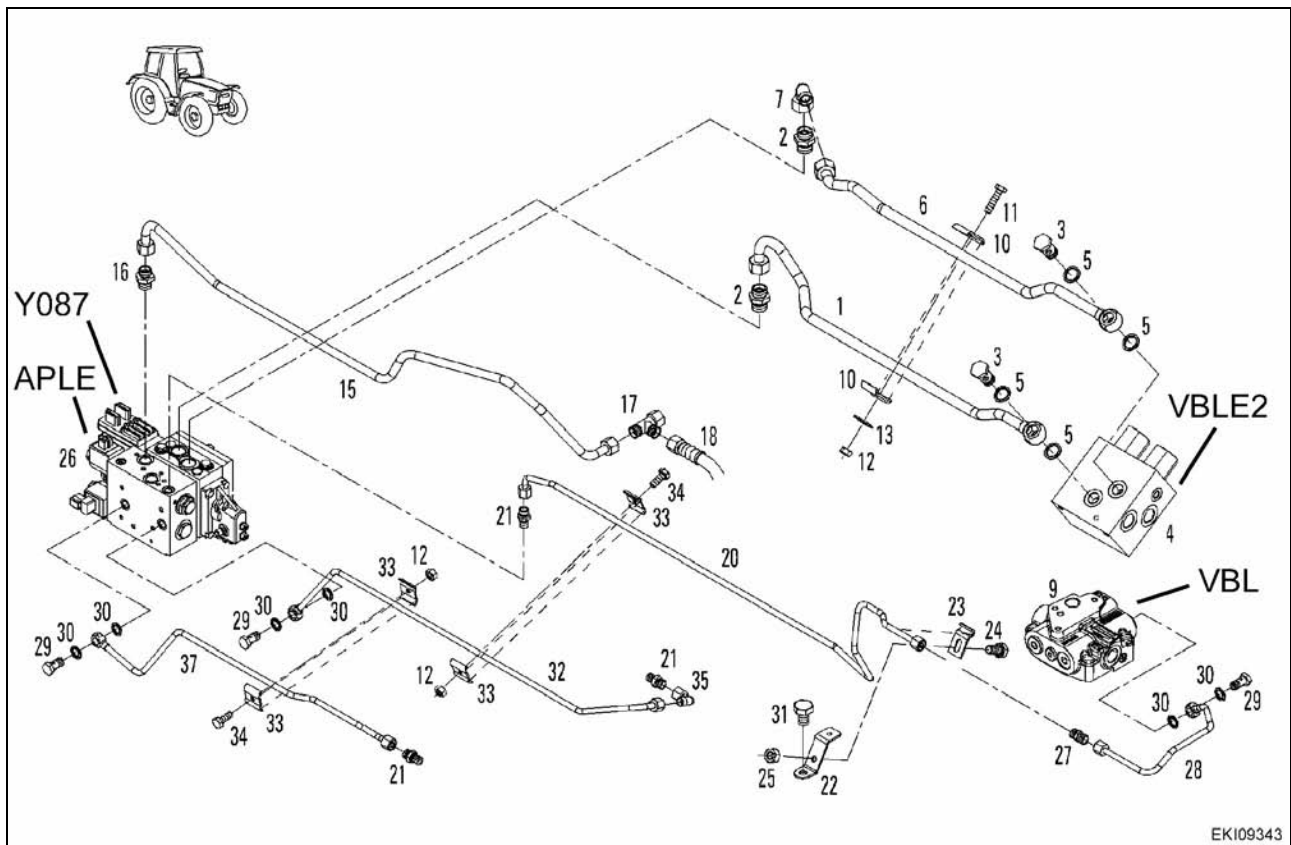


EKI09343
1005851

Assembly Instructions


Item	Designation	Part number
Y087 (PVLE)	Autoguide control valve	
APLE	Connector plate for electr. hydr. Steering	
VBLE2	Valve block, separating steering cylinder (ZL) and steering servo unit (LE)	
VBL	Valve block, steering	
1.1	Pressure pipe	H 931.952.400.020
1.2	Screw socket	X 592.502.201.000
1.3	Banjo bolt	205.950.010.340
1.4	Valve block, separating steering cylinder (ZL) and steering servo unit (LE)	G 931.402.130.020
1.5	Usit ring	X 566.009.700.000
1.6	Pressure pipe	H 931.952.400.010
1.7	Elbow union	X 584.316.300.000
1.9	Valve block, steering	
1.10	Clamp	178.950.010.260
1.11	Hex screw	X 487.520.941.000
1.12	Hex nut	X 428.202.239.000
1.13	Spring washer	X 520.803.901.000
1.15	Return pipe	H 931.952.400.030
1.16	Screw socket	X 592.501.202.000
1.17	T connector	X 584.416.200.000
1.18	Return hose	

Item	Designation	Part number
1.20	Pressure pipe	H 931.952.400.190
1.21	Screw socket	X 592.501.000.000
1.22	Retainer	931.952.030.080
1.23	Clamp	268.600.130.110
1.24	Hex screw	X 487.526.841.000
1.25	Hex nut	X 428.202.439.000
1.26	Valve block, Auto-Guide: - Connector plate (APLE) - Y087 Auto-Guide control valve (PVLE) - End plate (EPL)	G 931.402.130.011
1.27	Screw coupling	X 592.616.000.000
1.28	Pressure pipe	H 931.952.400.170
1.29	Banjo bolt	X 494.515.300.000
1.30	Usit ring	X 566.005.600.000
1.31	Hex screw	X 487.530.441.000
1.32	Pressure pipe	H 931.952.400.180
1.33	Clamp	278.951.130.280
1.34	Hex screw	X 487.520.041.000
1.35	Elbow union	X 584.316.000.000
1.37	Pressure pipe	H 931.952.400.120

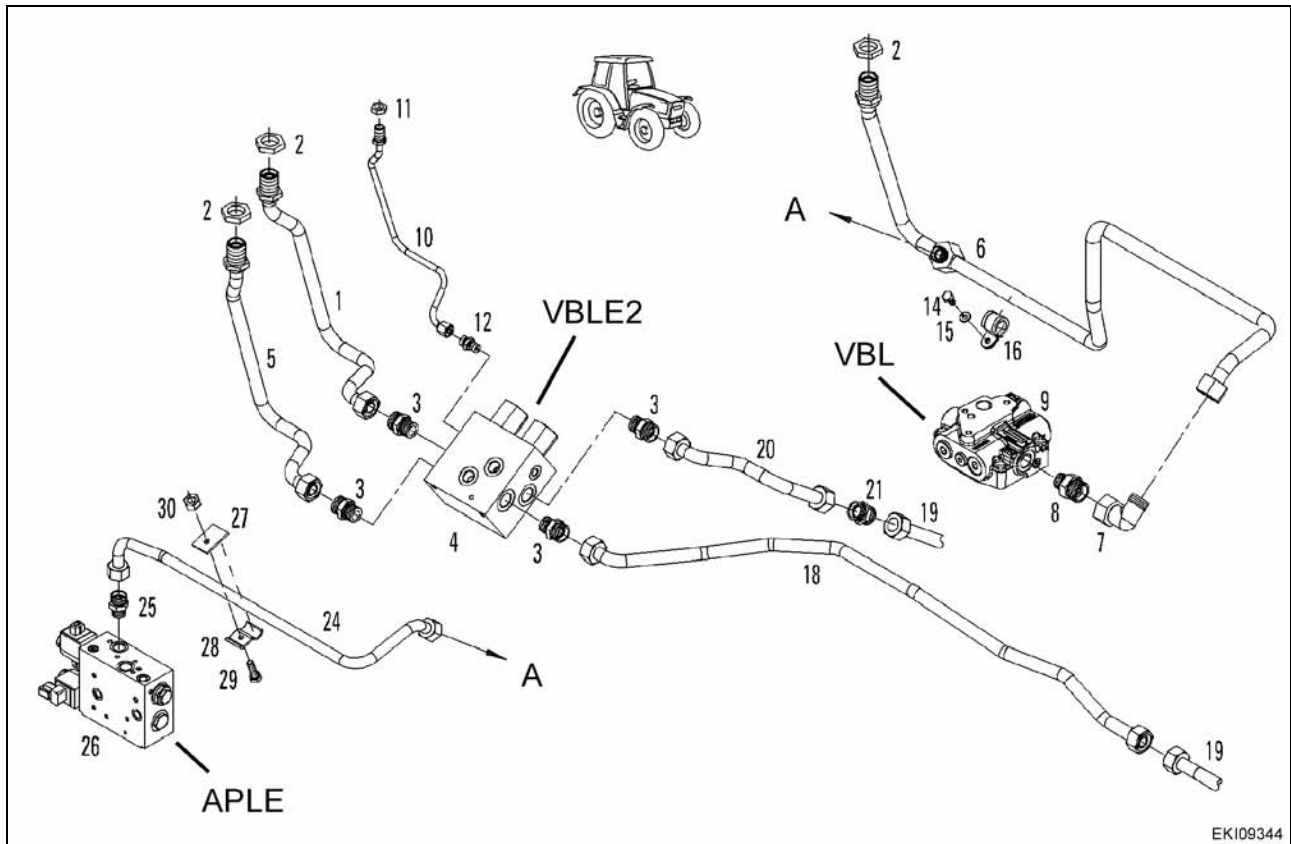

Item	Designation	Part number
APLE	Connector plate for elect. hydr. Steering	


Item	Designation	Part number
VBLE2	Valve block, separating steering cylinder (ZL) and steering servo unit (LE)	
VBL	Valve block, steering	
2.1	Pressure pipe	H 931.952.400.090
2.2	Nut	X 435.906.800.000
2.3	Screw socket	X 592.501.401.000
2.4	Valve block, separating steering cylinder (ZL) and steering servo unit (LE)	G 931.402.130.020
2.5	Pressure pipe	H 931.952.400.100
2.6	Pressure pipe	H 931.952.400.150
2.7	Elbow union	X 584.318.100.000
2.8	Screw socket	G 931.952.340.140
2.9	Valve block, steering	
2.10	Pressure pipe	H 931.952.400.060
2.11	Nut	X 435.903.801.000
2.12	Screw socket	X 592.501.000.000
2.14	Hex screw	X 487526.841.000
2.15	Spring washer	X 520.803.901.000
2.16	Pipe clamp	X 459.076.400.000
2.18	Pressure pipe	H 931.952.400.080
2.19	Pressure pipe (to steering cylinder)	
2.20	Pressure pipe	H 931.952.400.070
2.21	Pipe coupling	X 592.616.400.000
2.24	Pressure pipe	H 931.952.400.041
2.25	Screw socket	X 592.502.201.000
2.26	Connector plate for electr. hydr. steering (APLE)	G 931.402.130.011
2.27	Strap	210.952.160.040
2.28	Clamp	916.100.620.020
2.29	Hex screw	X 487520.741.000
2.30	Hex nut	X 428.202.239.000

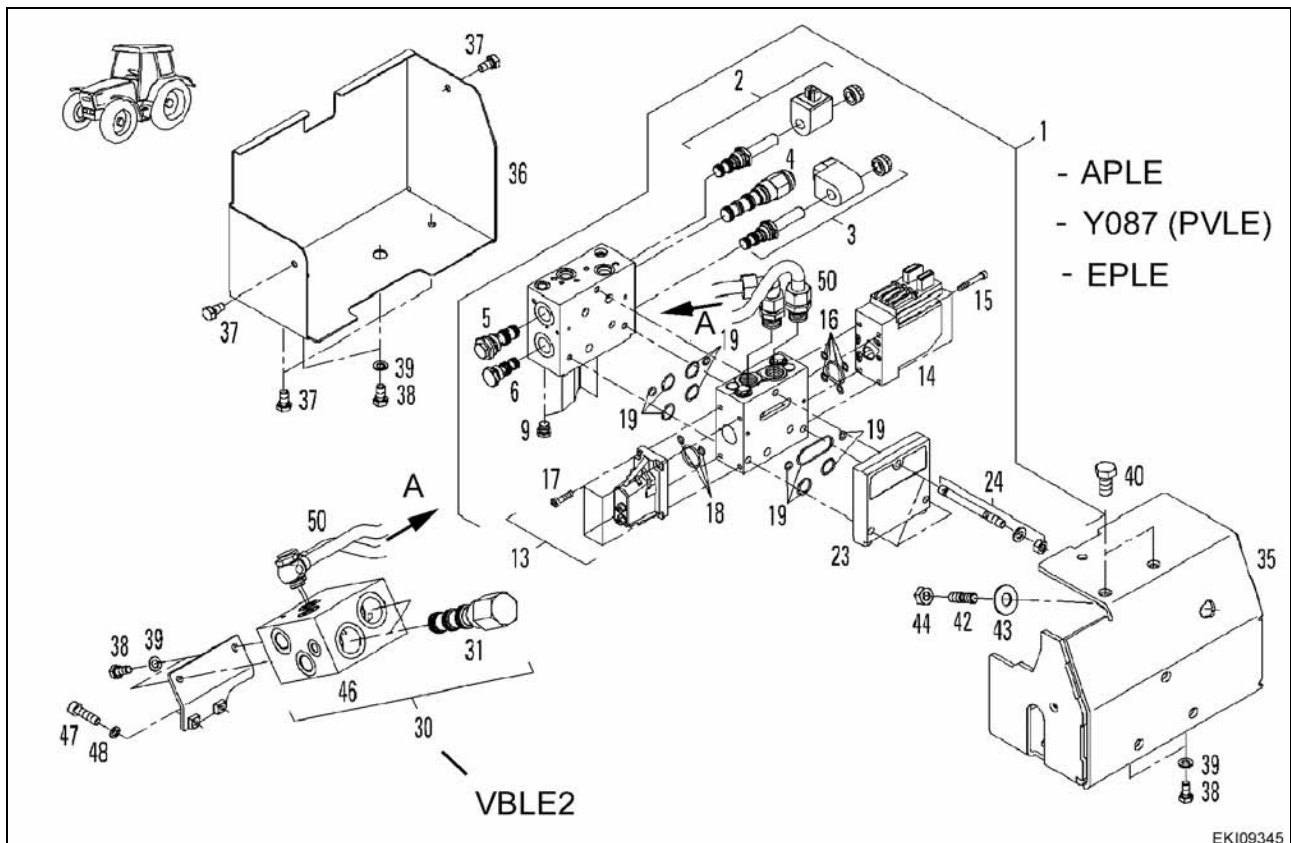


Item	Designation	Part number
Y087 (PVLE)	Autoguide control valve	
APLE	Connector plate for electr. hydr. Steering	
EPLE	End plate for electr. hydr. Steering	
VBLE2	Valve block, separating steering cylinder (ZL) and steering servo unit (LE)	
3.1	Valve block, Auto-Guide: - Connector plate (APLE) - Y087 Auto-Guide control valve (PVLE) - End plate (EPLE)	G 931.402.130.011
3.2	Y085 steering switch-off solenoid valve (Auto-Guide)	F 931.402.130.010
3.3	Y086 steering disconnect solenoid valve	F 931.402.130.030
3.4	Valve	F 931.402.130.040
3.5	Valve	F 931.402.130.060
3.6	Valve	F 931.402.130.080
3.9	Screw plug	X 483.900.000.000
3.13	Y087 Auto-Guide control valve	G 931.402.130.040
3.14	Pilot control unit	G 931.402.130.070
3.15	Socket head cap screw	X 485.005.505.000
3.16	Seal set	F 210.962.020.050
3.17	Socket head cap screw	X 485.004.405.000
3.18	Seal set	F 210.962.020.080
3.19	Seal set	F 210.962.020.040

Item	Designation	Part number
3.23	End plate (EPL)	G 931.402.130.050
3.24	Parts set	F 931.402.130.100
3.30	Valve block, separating steering cylinder (ZL) and steering servo unit (LE)	G 931.402.130.020
3.31	Valve	F 931.402.130.110
3.35	Retainer	H 931.402.130.010
3.36	Cover panel	H 931.402.130.030
3.37	Hex screw	X 487526.841.000
3.38	Hex screw	X 487527.741.000
3.39	Spring washer	X 520.803.901.000
3.40	Hex screw	X 487535.441.000
3.42	Stud bolt	X 489.131.505.000
3.43	Washer	X 454.407.508.000
3.44	Hex nut	X 428.202.839.000
3.46	Retainer	H 931.402.130.020
3.47	Socket head cap screw	X 485.007.641.000
3.48	Spring washer	X 523.703.900.000
3.50	Auto-Guide pressure pipe	H 931.952.400.020 H 931.952.400.010


Assembly Instructions

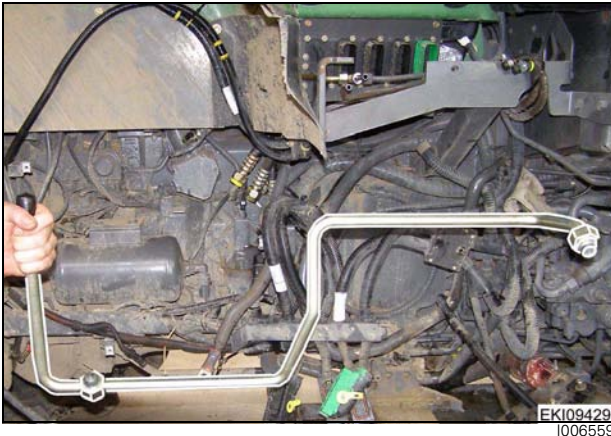

Install **hydraulic pipe (H 931.952.400.150) (2.6)**.

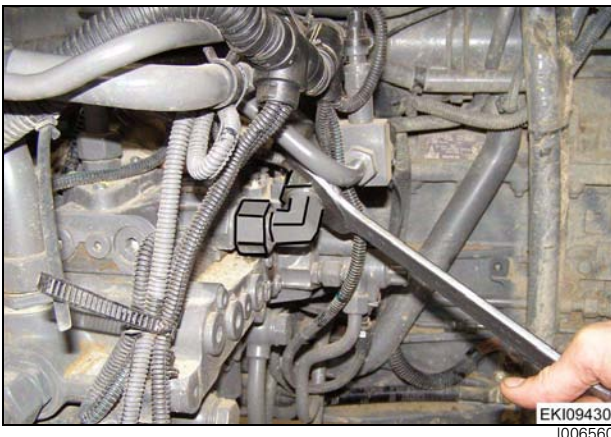

Screw hydraulic pipe (2.6) onto central control block (ZSB).

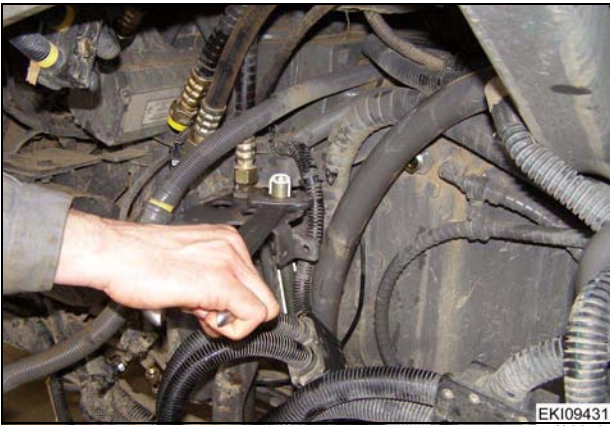

EKI09431
1006561



Screw on hydraulic pipe (2.6).



EKI09432
1006562



Screw on hydraulic pipe.



EKI09433
1006563



Screw on hydraulic piping.



EKI09434
1006564



Screw on hydraulic pipe.



EKI09435
1006565



Screw on hydraulic pipe.



EKI09436
1006566



Screw on hydraulic pipe.



EKI09509
1006773




Position pipe clamp.
 Position pipe clamp (2.16).



EKI09438
1006568



Screw pressure pipe onto air compressor

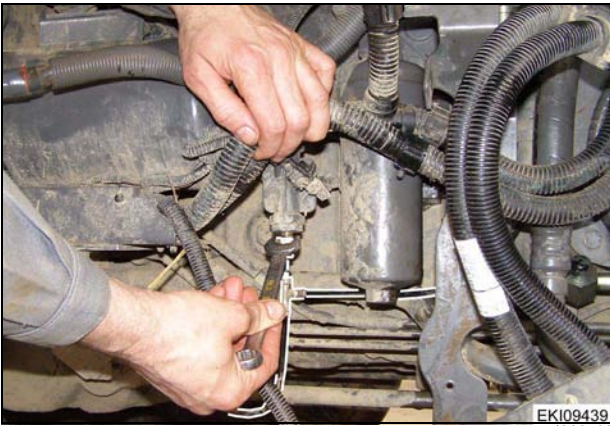

EKI09439
1006569



Screw on compressed air pipe.



EKI09440
1006587



Valve block, separating steering cylinder and steering servo unit (VBLE2) (2.4):
pre-assemble.

NOTE:


The valve block (VBLE2) prevents the steering wheel from turning when "Auto-Guide" track guidance is active.



EKI09441
1006589



Valve block, separating steering cylinder and steering servo unit (VBLE2) (2.4):
pre-assemble.

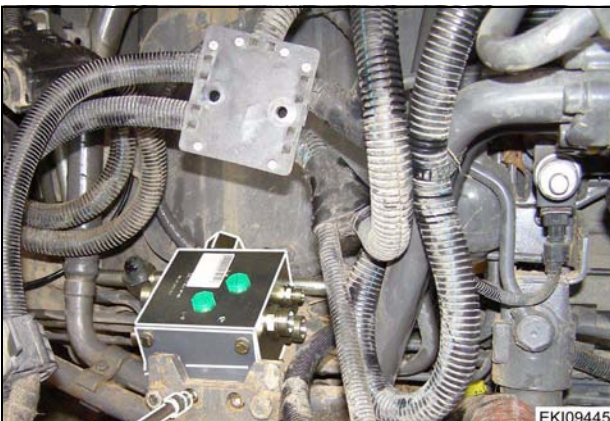


EKI09445
1006605




Install valve block (VBLE2) (2.4).
Insert screw and hand tighten.




Screw on hydraulic pipe (2.10).

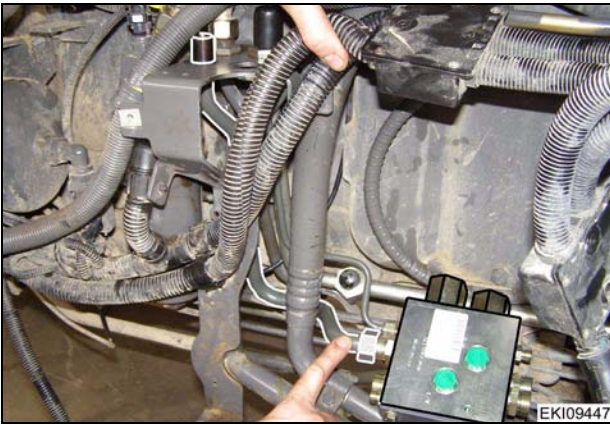


Screw on hydraulic pipe (2.1).

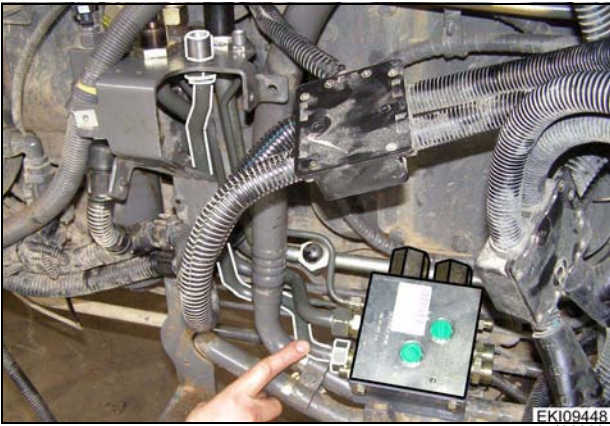

Screw on hydraulic pipe (2.5).

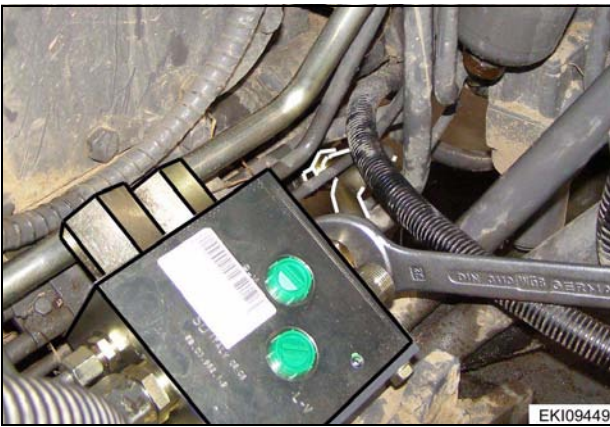


Screw on hydraulic pipe (2.20).

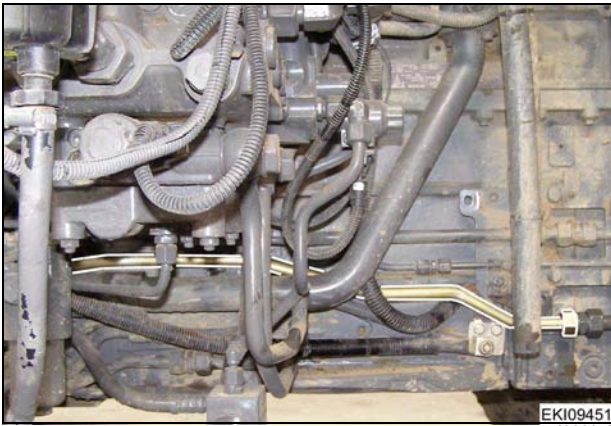

EKI09451
1006610



Thread hydraulic pipe (2.18).

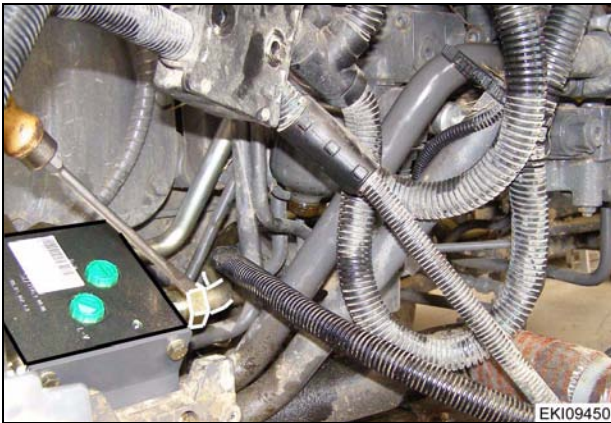

EKI09450
1006609



Screw on hydraulic pipe (2.18).



EKI09452
1006611




Fit guard.



EKI09453
1006612



Screw hydraulic hoses onto the steering system.

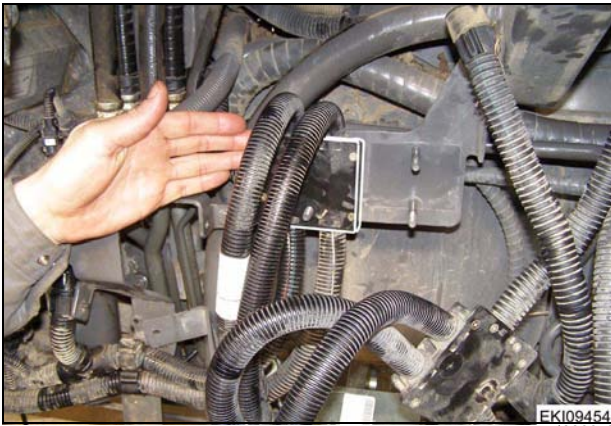

EKI09454
1006616



Install retainer and wiring harness.



EKI09455
1006617




Pre-assemble **Y087 Auto-Guide control valve** and **APLE connector plate** (1.26).



EKI09456
1006618



Loosen wiring harness attachment.
Put wiring harness to one side.

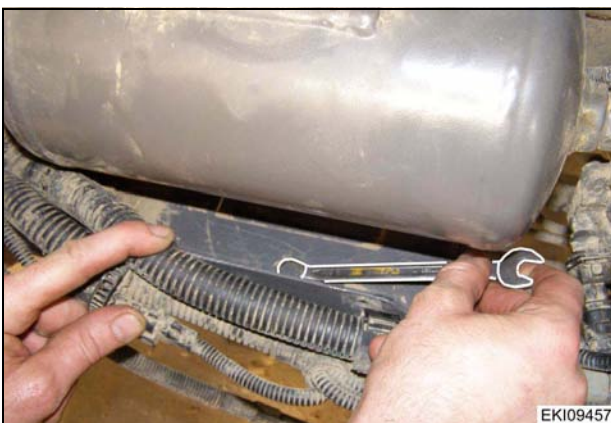

EKI09457
1006619



Remove two hex bolts.



EKI09458
1006620




Screw in threaded bore M8.



EKI09459
1006621



Screw in stud bolt (3.42).

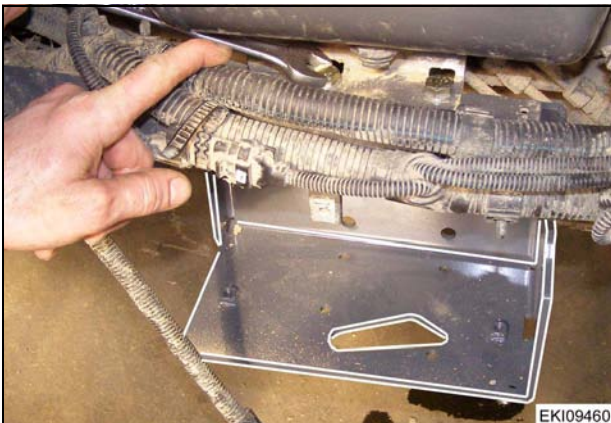

EKI09460
1006622




Install retainer (3.35).



EKI09461
1006623




NOTE:
Do not tighten the screws just yet.

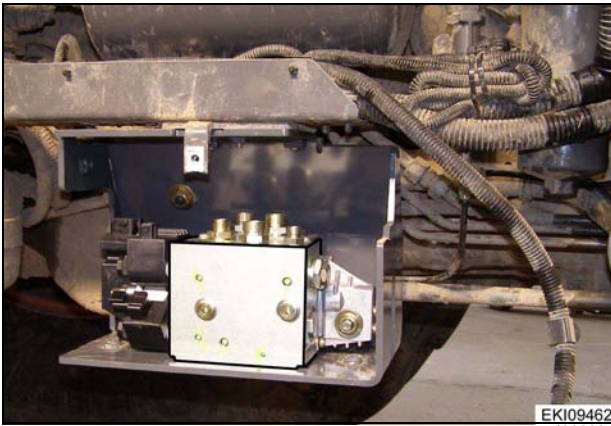

EKI09462
1006624




Install Y087 Auto-Guide control valve (1.26).

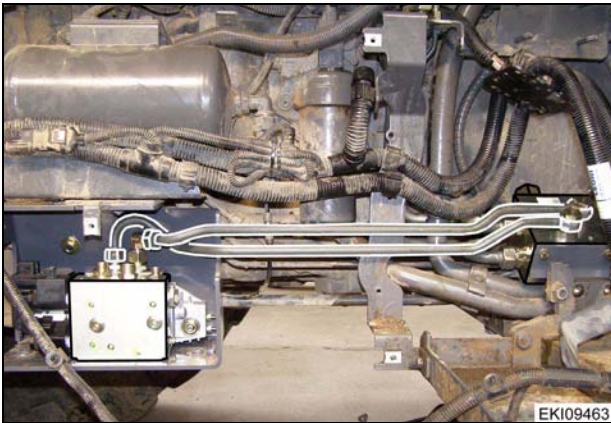

EKI09463
1006629



Screw on hydraulic pipes (1.1 and 1.6).

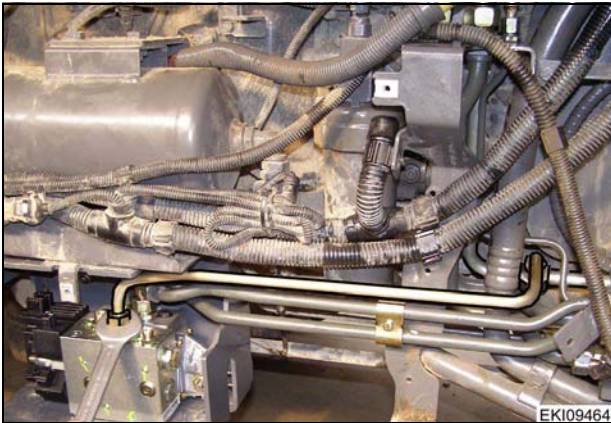

EKI09464
1006630




Screw on hydraulic pipe (pressure line p) (2.24).



EKI09465
1006631



Unscrew suction hose for hand pump.
 Remove elbow union.
 Screw on T connector (1.17).

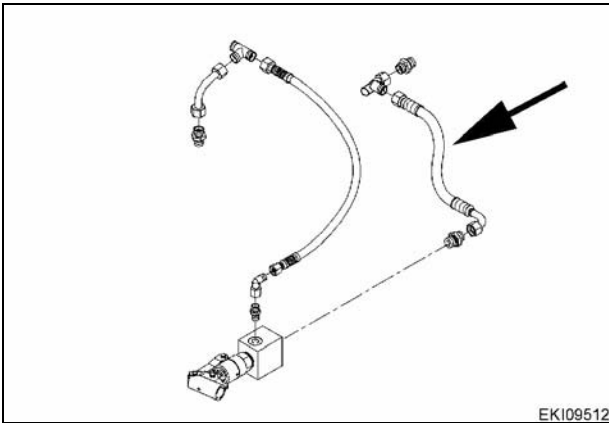

EKI09512
1006786




Screw on suction hose for hand pump (arrow).



EKI09466
1006632



Screw on hydraulic pipe (return) (1.15).

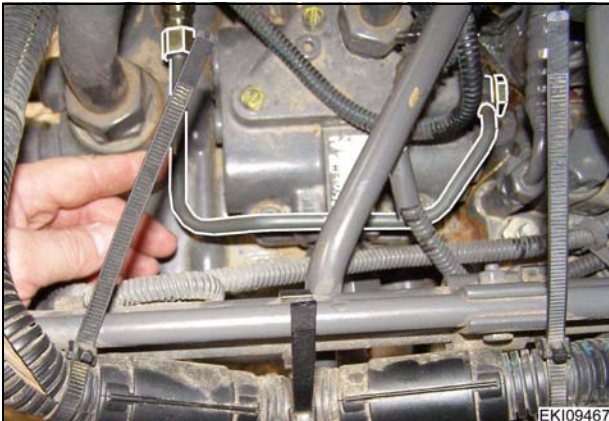

EKI09467
1006638




Install Load Sensing pipe (1.28).



EKI09468
1006639




Install Load Sensing pipe (1.20).

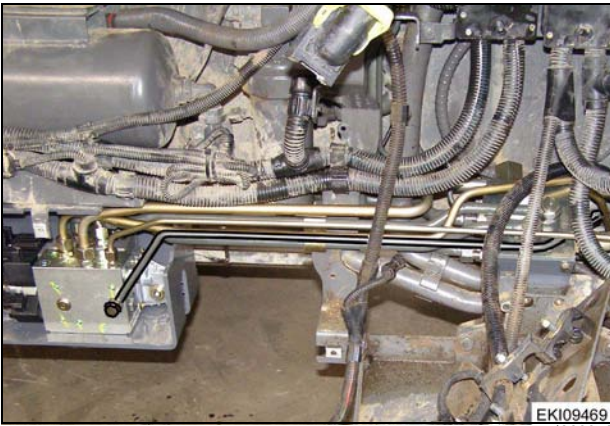

EKI09469
1006640




Install hydraulic pipe (1.32).

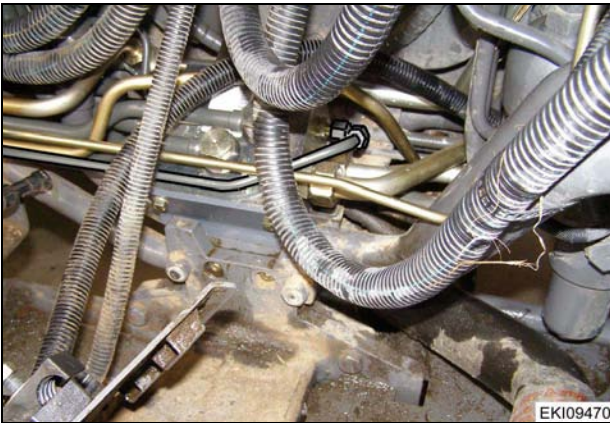

EKI09470
1006641




Install hydraulic pipe (1.32).

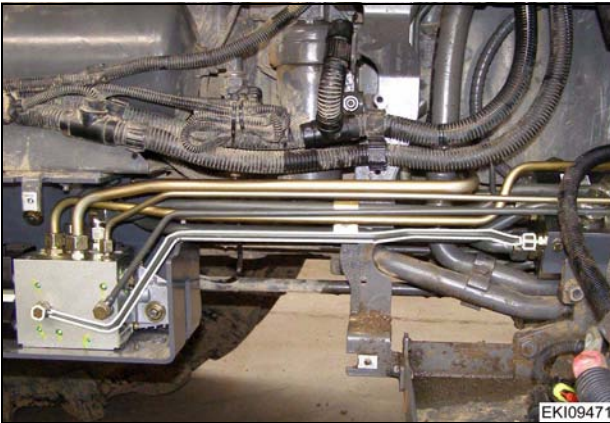

EKI09471
1006642



Install hydraulic pipe (1.37).

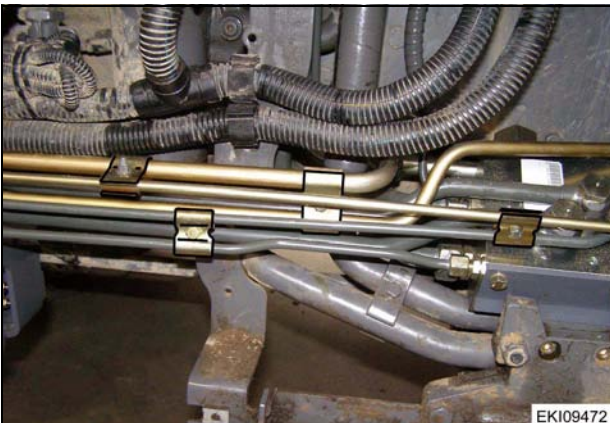

EKI09472
1006643



Secure hydraulic pipes with pipe clamps.



EKI09473
1006644



Secure hydraulic pipe with pipe clamp.




EKI09478
1006650



- Install wiring harness.
- Install right fuel tank.
- Fill up hydraulic oil

Electrical wiring

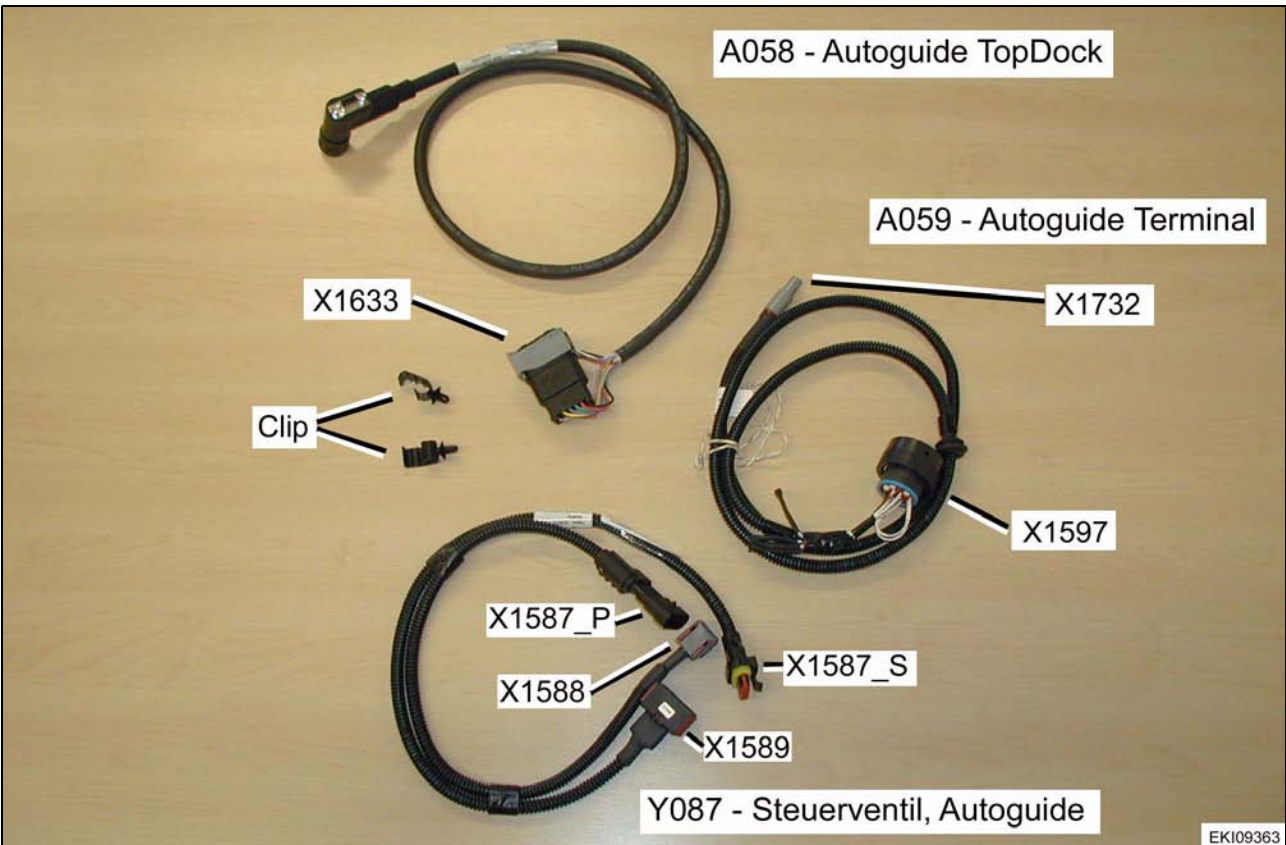

A058 - Autoguide TopDock

A059 - Autoguide Terminal

X1633

X1732

Clip

X1597

X1587_P

X1587_S


X1588

X1589

Y087 - Steuerventil, Autoguide

EKI09363
1006031

Y087 Auto-Guide control valve

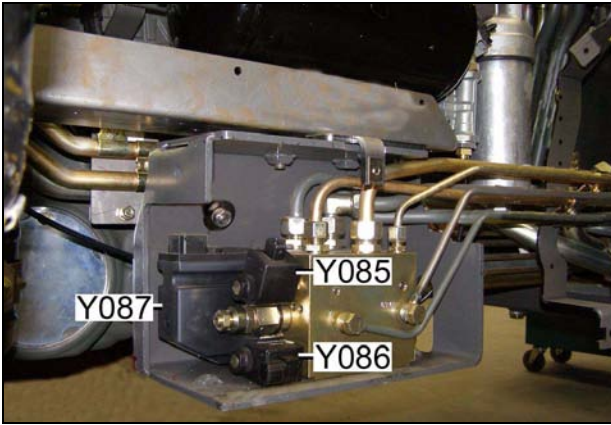


I001987



Y085 solenoid valve for automatic track guidance switch-off

Y086 steering disconnect solenoid valve
Y087 Auto-Guide control valve

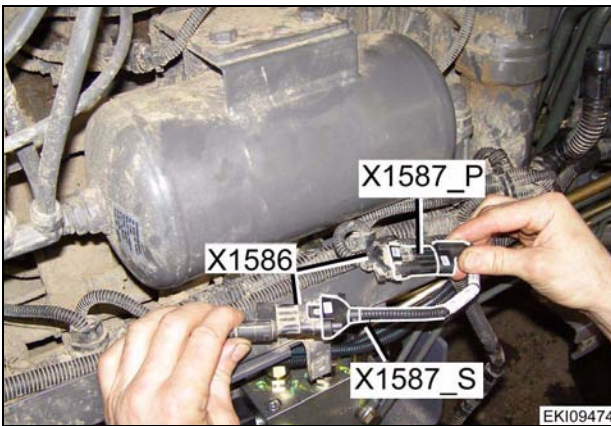


EKI09474
I006646



Open X1586 separation point and connect connection cable set (X1587 separation point).


Assembly Instructions

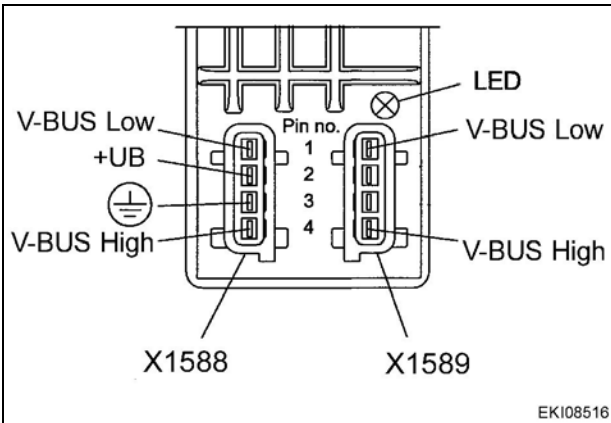

EKI08516
I002198




X1588 separation point and X1589 separation point need to be connected.

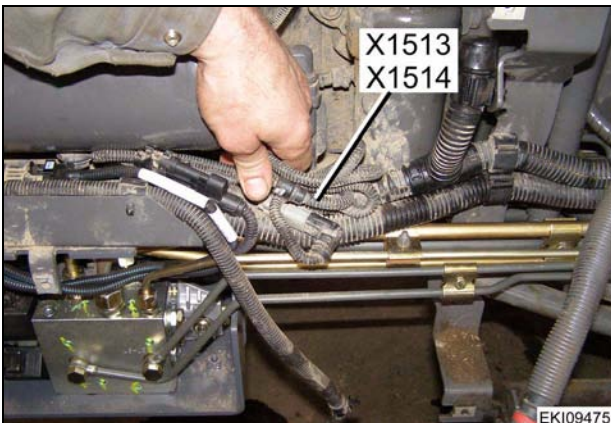

EKI09475
I006647




Undo cable ties

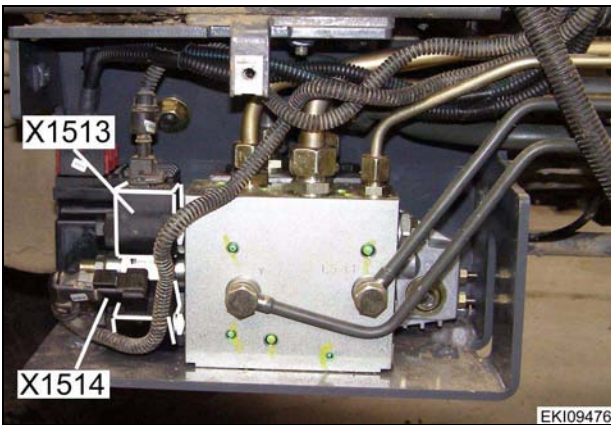

EKI09476
1006648



Y085 solenoid valve for automatic track guidance switch-off
X1513 separation point
Y086 steering disconnect solenoid valve
X1514 separation point

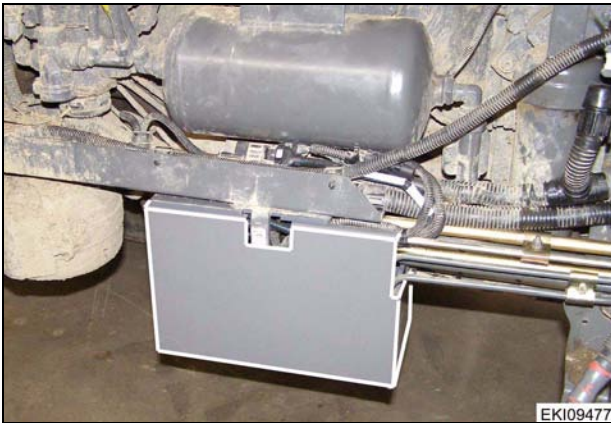

EKI09477
1006649



Install guard.


B081 steering wheel sensor


Steering servo unit, tractor without reverse drive control (Rüfa)

Assembly Instructions

Lenksäule, Schlepper ohne Rückfahreinrichtung (Rüfa)

931.402.090.000

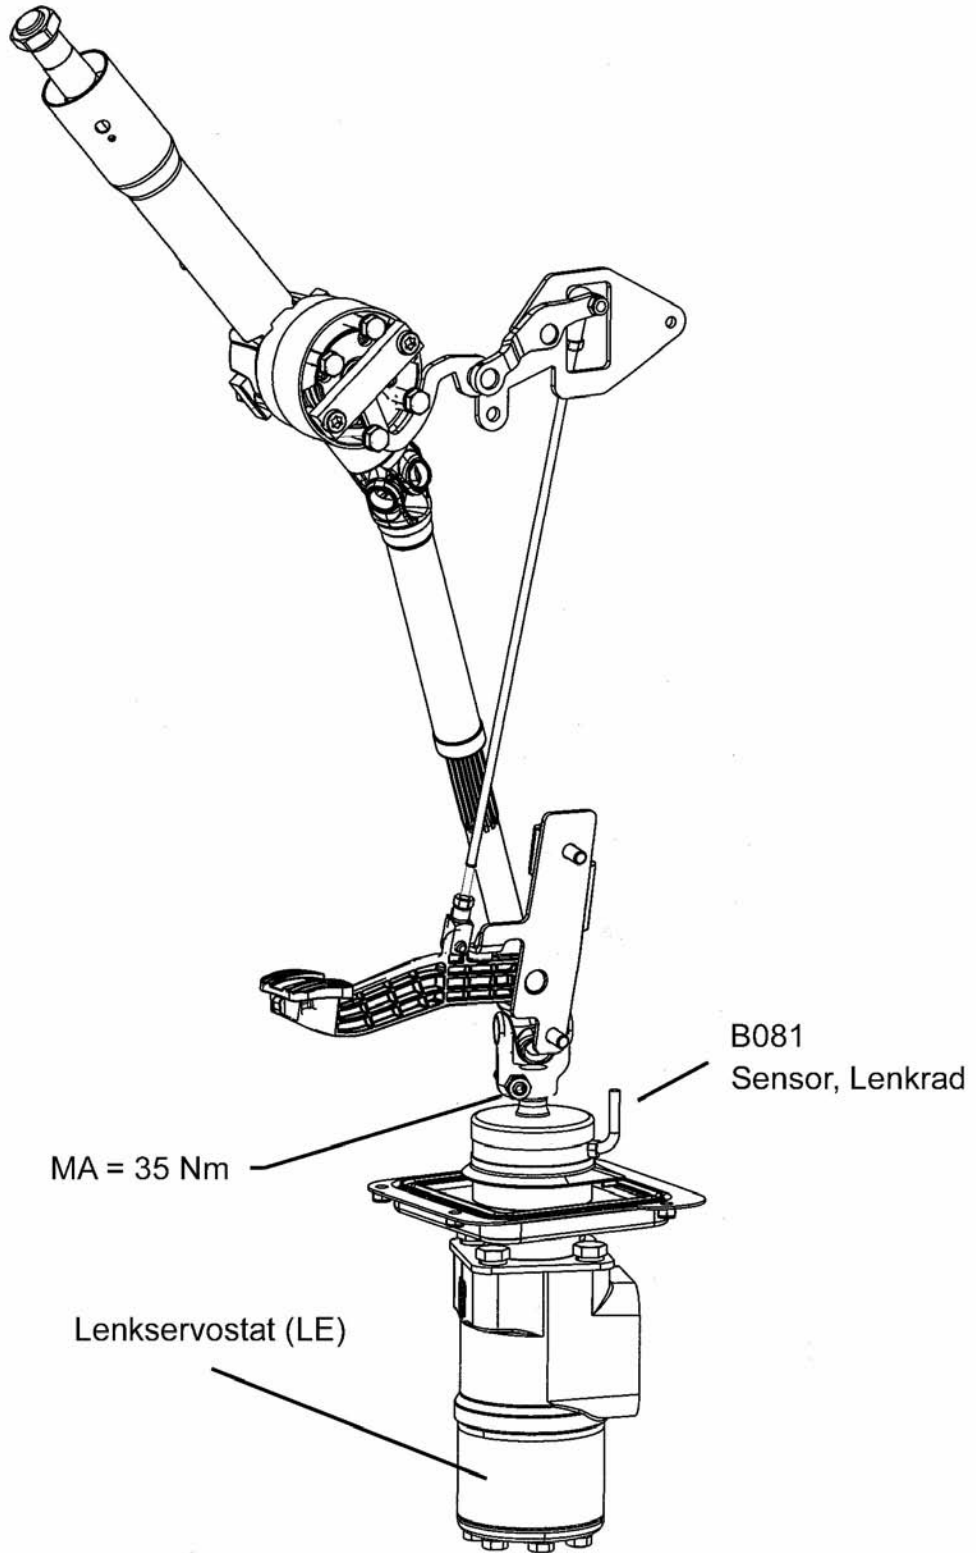

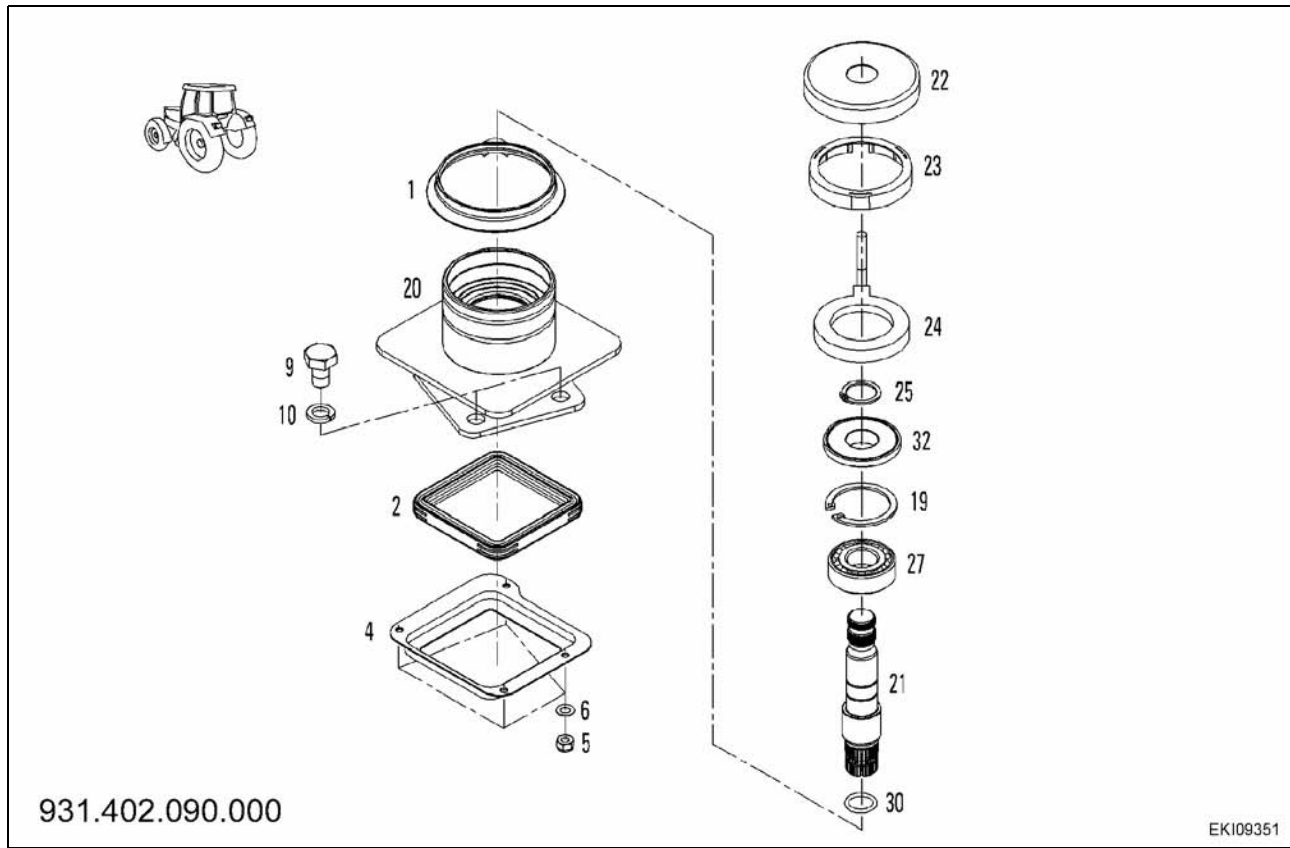
Steering servo unit, tractor without reverse drive control (Rüfa)


Item	Designation	Part number
1	Protective cap	931.402.090.160
2	Profile	210.402.090.160
4	Retainer	931.402.090.250
5	Hex nut	X 434.102.240.000
6	Spring washer	X 521.403.047.000
9	Hex screw	X 487.530.441.000
10	Spring washer	X 520.804.401.000
20	Bearing	H 931.402.090.080
21	Splined shaft	931.402.090.170
22	Protective cap	931.402.090.010
23	Clamping ring	931.402.090.101
24	B081 steering wheel sensor	G 931.970.190.120
25	Circlip	X 530.002.746.000
27	Deep-groove ball bearing	X 607.305.302.000
30	O-ring	X 548.844.266.000
32	Ring	H 931.901.020.050
34	Circlip	X 530.150.346.000

Assembly Instructions


Lenkservostat (LE), Schlepper ohne Rückfahreinrichtung (Rüfa)

931.402.090.000

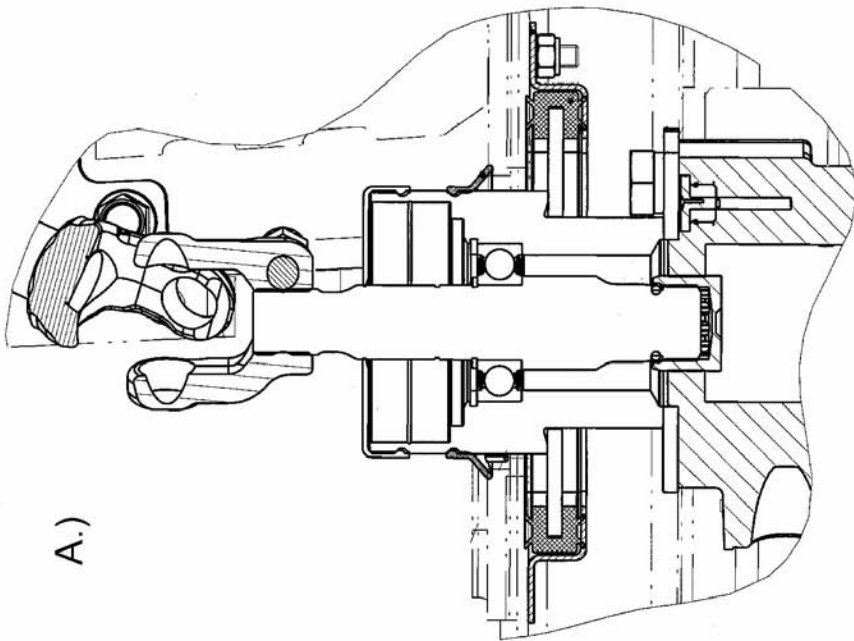

A.)

Lenkservostat (LE) ohne B081-Sensor, Lenkrad

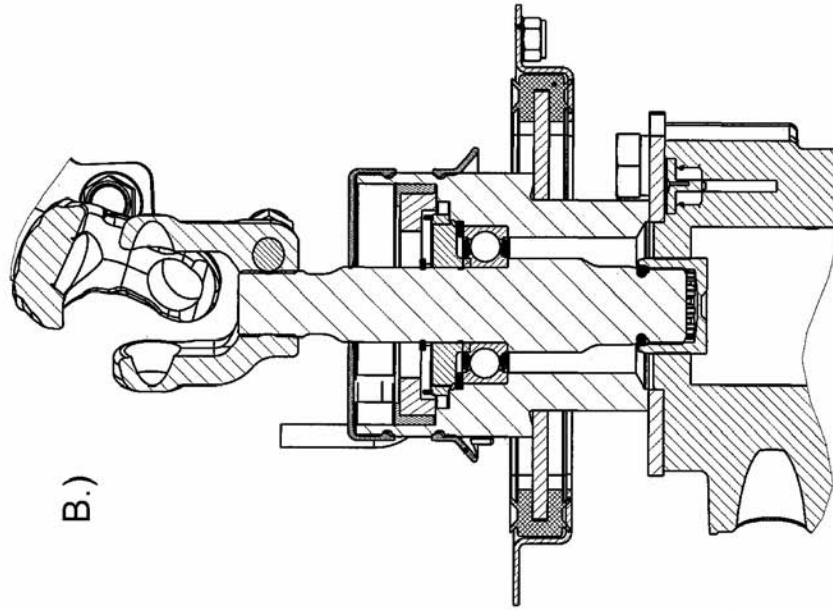

B.)


Lenkservostat (LE) mit B081-Sensor, Lenkrad

EK109347

1005863

Steering column, tractor with "Rüfa" reverse drive control


EK108348

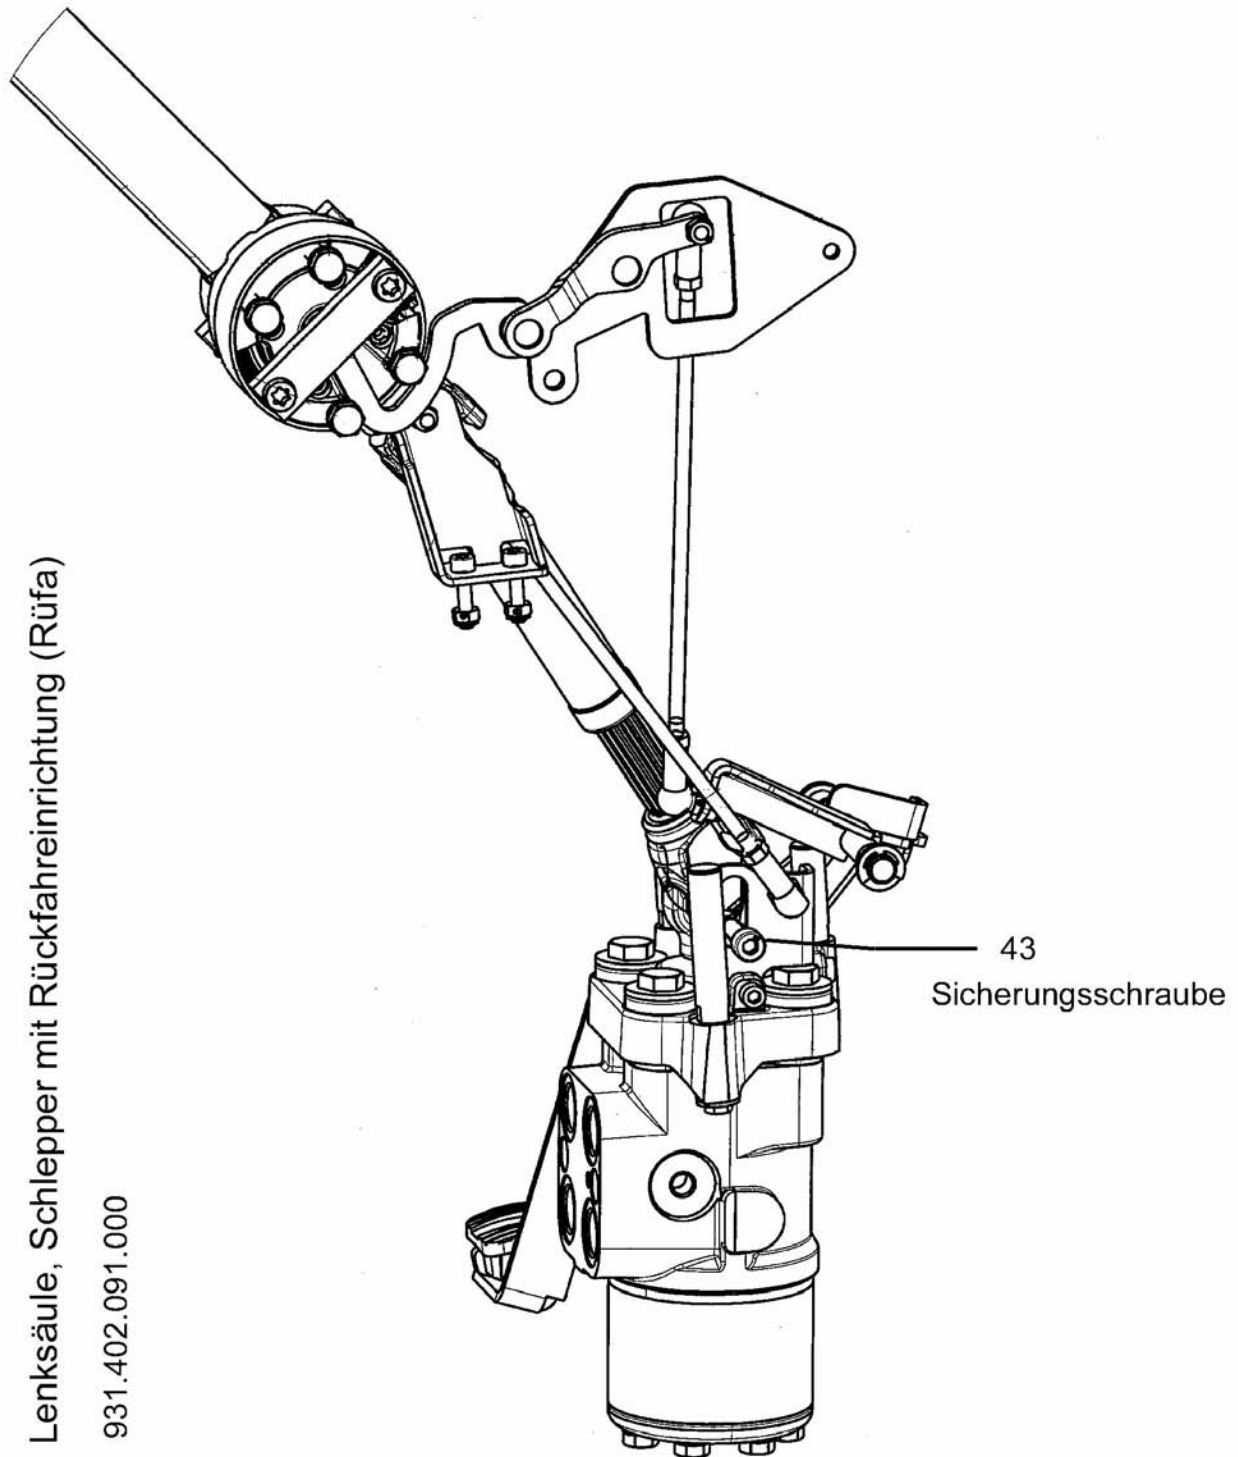

Lenksäule, Schlepper mit Rückfahreinrichtung (Rüfa)

931.402.091.000

1005858

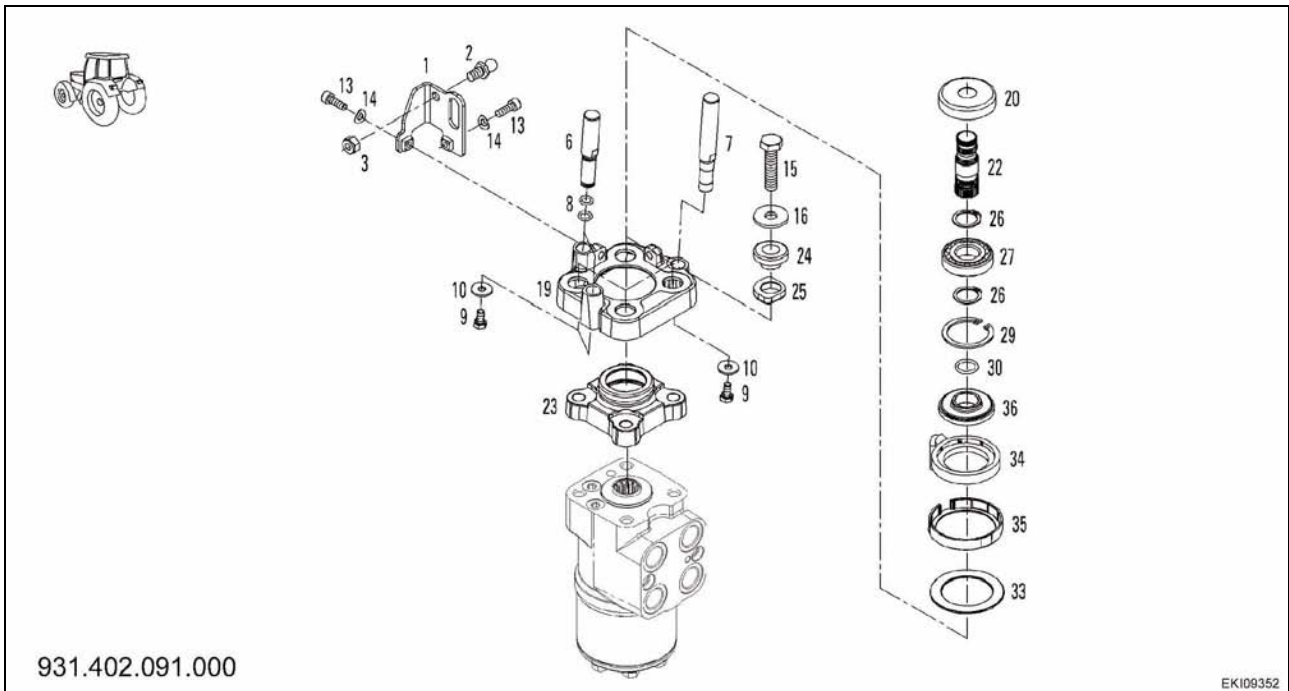


931.402.091.000

EK109352
1005861

Assembly Instructions

Item	Designation	Part number
1	Retainer	H 931.402.091.050
2	Ball pivot	X 504.827.000.000
3	Hex nut	X 434.102.440.000
6	Axle	931.402.091.210
7	Axle	931.402.091.220
8	O-ring	X 548.817.266.000
9	Hex screw	X 487.520.441.000
10	Washer	X 454.305.108.000
13	Socket head cap screw	X 485.005.000.000
14	Spring washer	X 521.403.047.000
15	Hex screw	X 487.532.041.000
16	Washer	X 454.407.508.000
19	Retainer	931.402.091.180
20	Protective cap	931.402.091.100
22	Splined shaft	931.402.091.170
23	Bearing	931.402.091.190
24 / 25	Bearing	G 931.402.091.060
26	Circlip	X 530.002.746.000
27	Deep-groove ball bearing	X 607.305.302.000
29	Circlip	X 530.105.346.000
30	O-ring	X 548.844.266.000
33	Washer	931.402.091.120
34	B081 sensor, steering wheel	G 931.970.190.120
35	Clamping ring	931.402.090.101
36	Ring	H 931.901.020.050


EKI09350

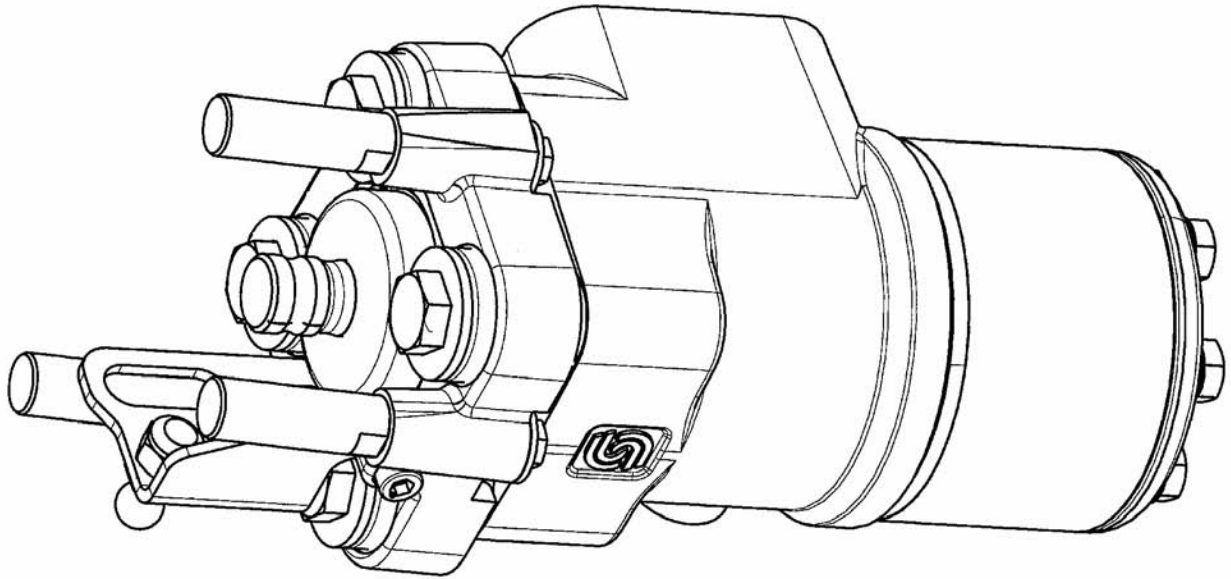

Lenkervostat (LE), Schlepper mit Rückfahreinrichtung (Rüfa)

931.402.091.000

ohne B081-Sensor, Lenkrad

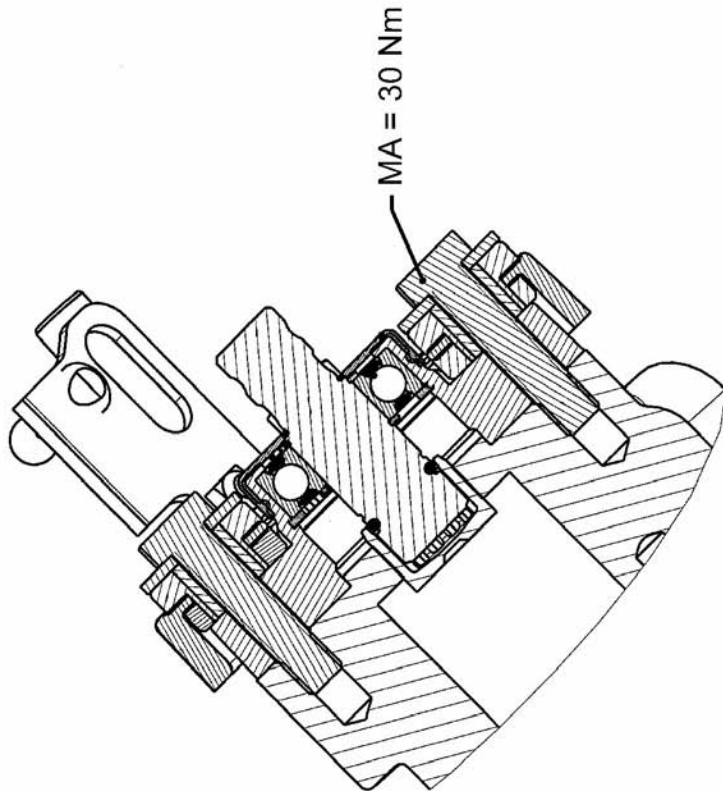

1005859

Assembly Instructions



Lenkservostat (LE), Schlepper mit Rückfahreinrichtung (Rüfa)

931.402.091.000

B081-Sensor, Lenkrad

MA = 30 Nm

geklebt

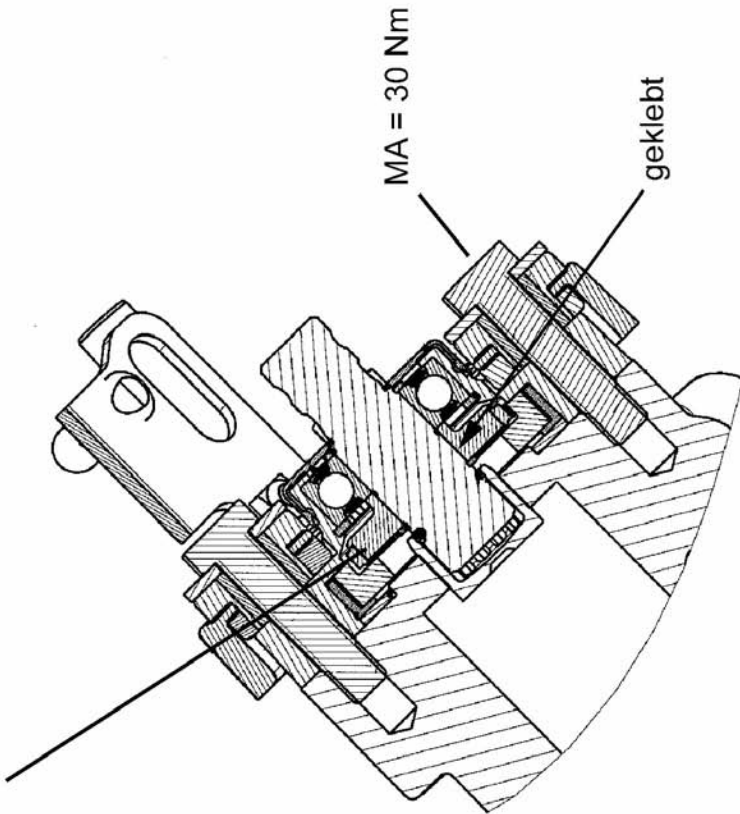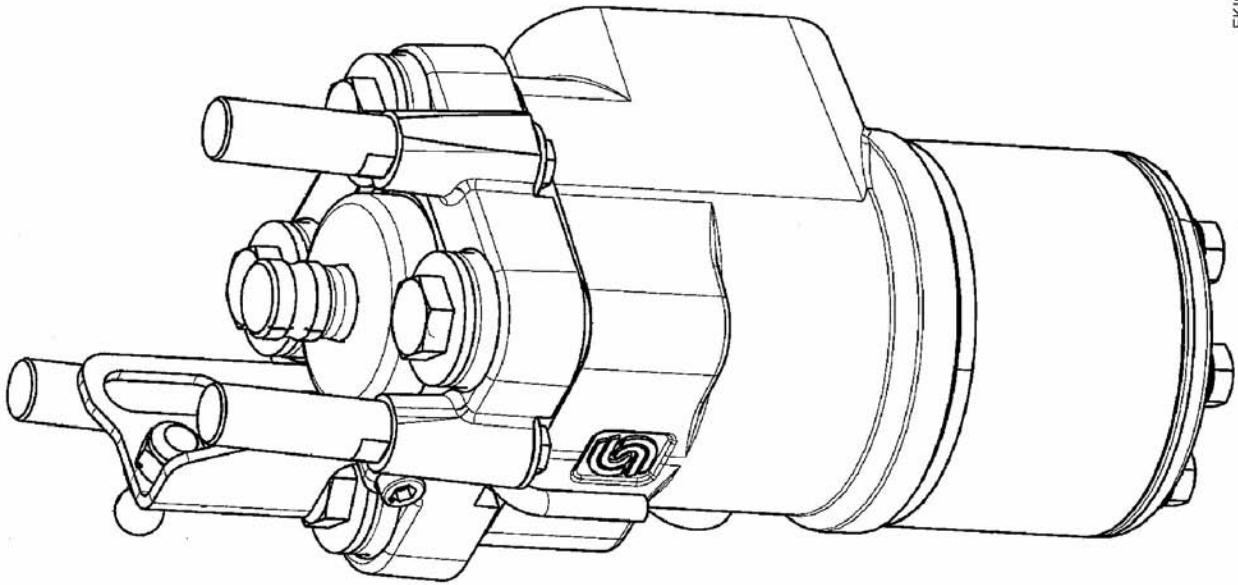

EK109349

1005860



EKI09479
1006651



NOTE:
Tractor without "Rüfa" reverse drive control

Remove the steering column cover.



EKI09480
1006652



Remove cover.



X1519

EKI09481
1006653




X1519 separation point
 Remove protective cap and put connector to one side.



EKI09482
1006654



Remove hex bolt and pull down the universal joint from the steering unit.

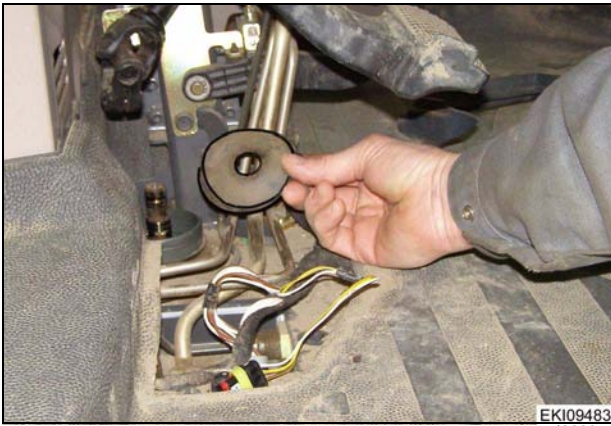

EKI09483
1006655



Remove protective cap.



EKI09484
1006656




Carefully clean steering unit bearing.



EKI09485
1006657



Pry off the circlip.

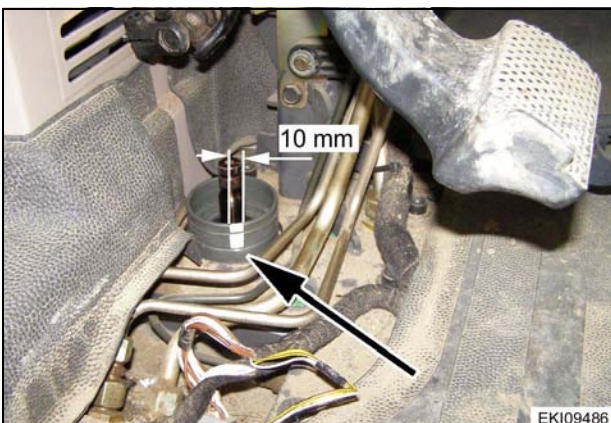

EKI09486
1006658



Make a slit in the steering unit bearing (width = 10 mm).



EKI09487
1006660



Coat the inside of the "rotor" ring (32) with synthetic bonding agent X903.050.084.



EKI09488
1006661



Fit "rotor" ring (32).

NOTE:

Ensure proper installation position. See technical drawing.



EKI09489
1006662



Put the circlip (25) in place.



EKI09490
1006663




Fit B081 sensor (24).


NOTE:

Ensure proper installation position. See technical drawing.


Assembly Instructions

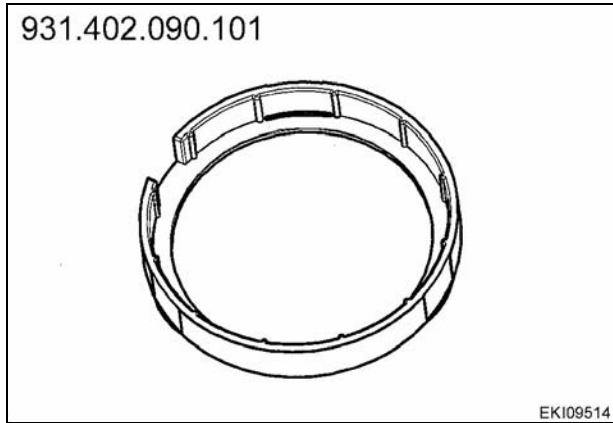

Clamping ring (23)

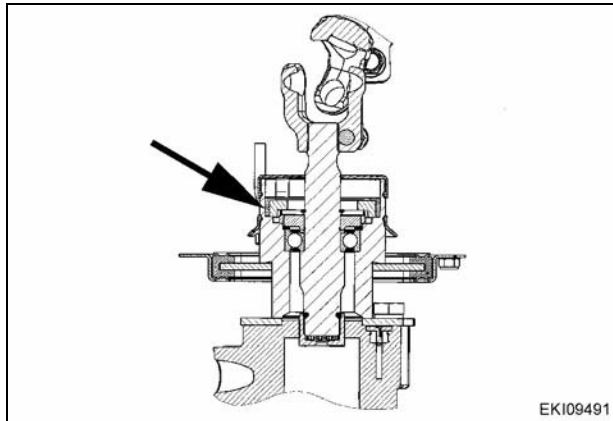


Fit clamping ring (23) (arrow).

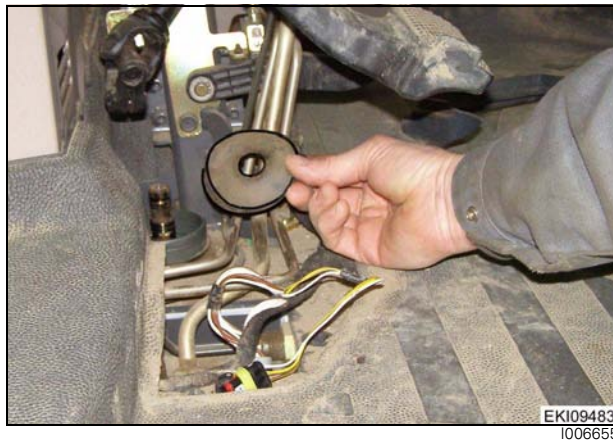

Fit protective cap.
 Attach X1519 separation point
 Fit steering column.

Install wiring (H931.901.042.170) for the A058 Auto-Guide TopDock

A058 Auto-Guide TopDock

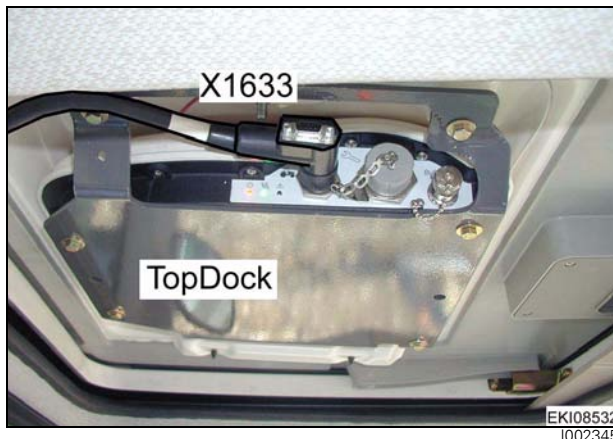

NOTE:

The A058 Auto-Guide TopDock is not part of the "Auto-Guide preparation" installation kit.



EKI09492
1006747




Remove interior rear view mirror.
 Remove A pillar panel.
 Remove right loudspeaker.



1006748



Remove sun blind.

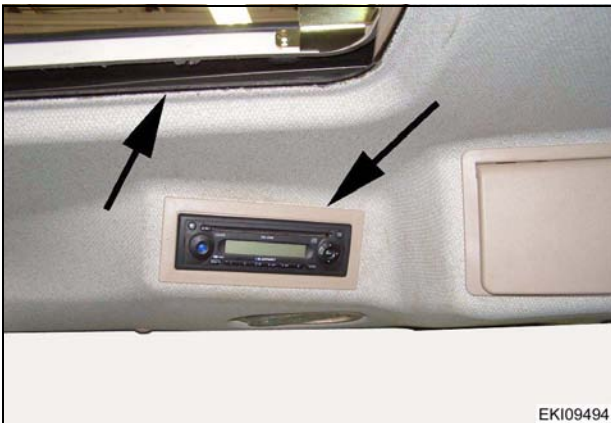

EKI09494
1006749



Remove radio.
 Remove rubber profile on ceiling compartment.



EKI09495
1006750



Unlock and disconnect the connector pins on cable set (H931.901.042.170).




NOTE:

We recommend the following for unlocking the pins:

Box containing unlocking tools (X899.980.280.010)


Assembly Instructions

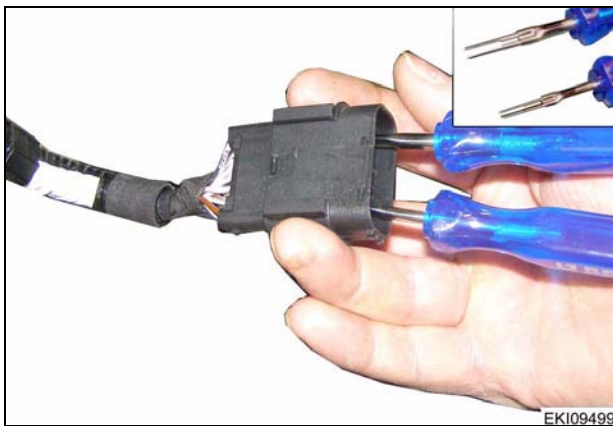

Item no. 124422

Item no. 33703


Insert tool and release pin from behind.

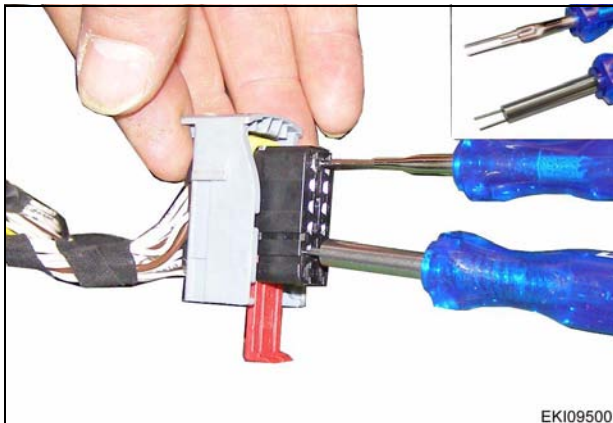


Item no. 39789

Item no. 39785

Insert tool and release pin from behind.

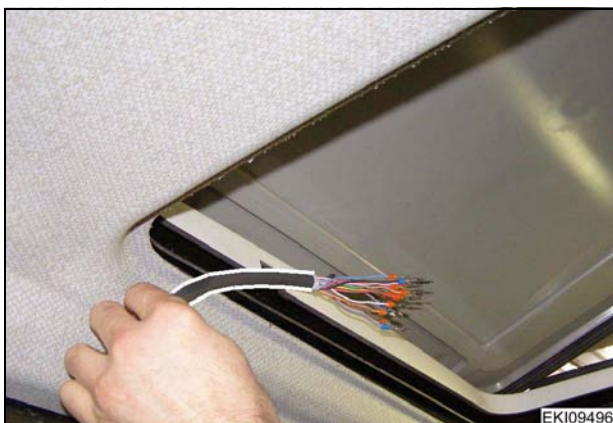


Work cable set (H931.901.042.170) into cab roof.

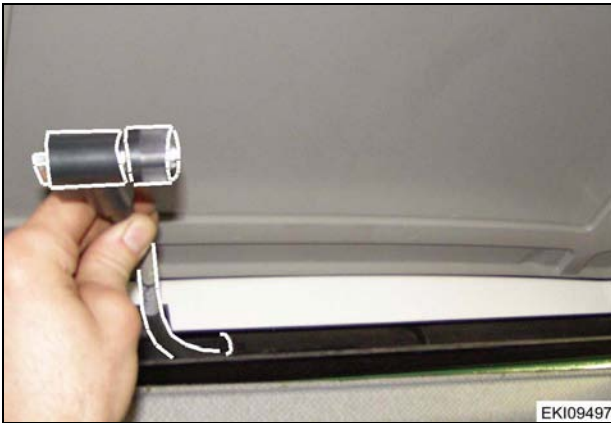

EKI09497
1006752



Work cable set (H931.901.042.170) into cab roof.

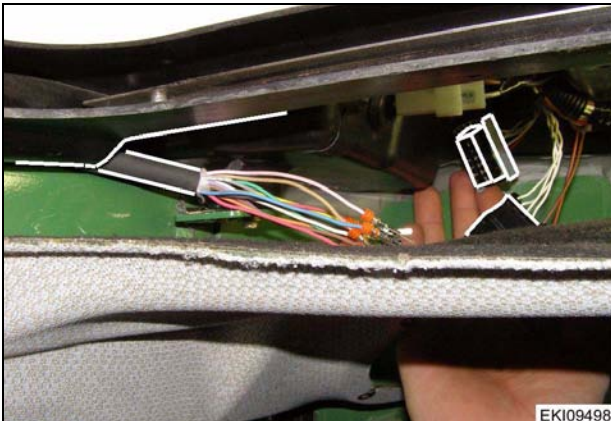


EKI09498
1006753



Work cable set (H931.901.042.170) into cab roof.

Pin assignment on cable set (H931.901.042.170)

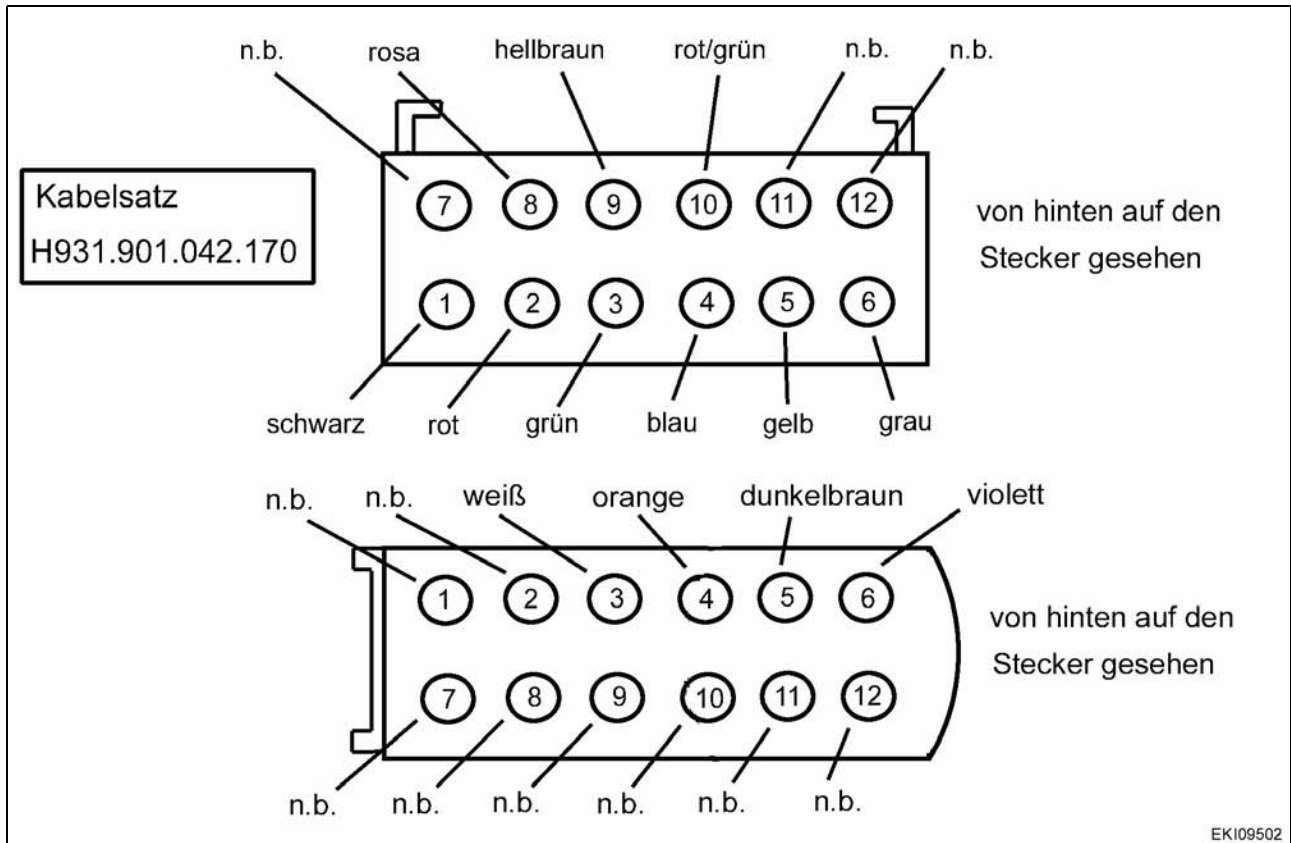


EKI09502
1006758

Plug part

Pin	Colour
1	black
2	red
3	green
4	blue
5	yellow
6	grey
7	Not assigned
8	pink
9	light brown
10	red/green
11	Not assigned
12	Not assigned

Socket part

Pin	Colour
1	Not assigned
2	Not assigned
3	white
4	orange
5	dark brown
6	violet
7	Not assigned
8	Not assigned
9	Not assigned
10	Not assigned
11	Not assigned
12	Not assigned

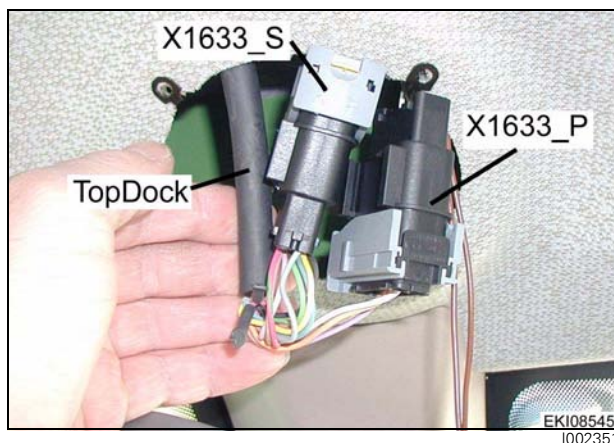**X1633 separation point for A058 Auto-Guide TopDock**

Disconnect X1633 separation point and connect connection cable set (H931.901.042.170).



Refit the parts inside the cab.


Install wiring for the A059 Auto-Guide terminal



A059 Auto-Guide terminal

NOTE:

The A059 Auto-Guide terminal is not part of the "Auto-Guide preparation" installation kit.

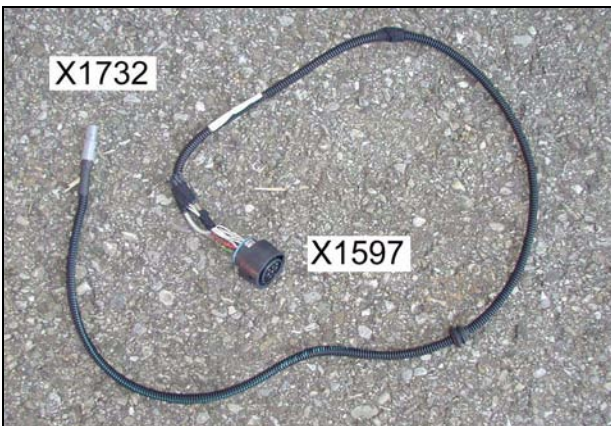

Connection cable set for A059-Auto-Guide terminal



Connect +supply to A059 Auto-Guide terminal.



Remove right side panel.



Remove bridge connector.



Insert bore (diameter = 16 mm).



Fit cable grommet and pull through connection cable.
Install side panel.

Program Auto-Guide system with EOL program 7.60 or higher




Program Auto-Guide system with EOL program 7.60 or higher

Calibrate Auto-Guide system

NOTE:

For calibration, see also:

**FENDT 900 VARIO COM III workshop manual
Chapter 0000 Reg. F – Calibration**

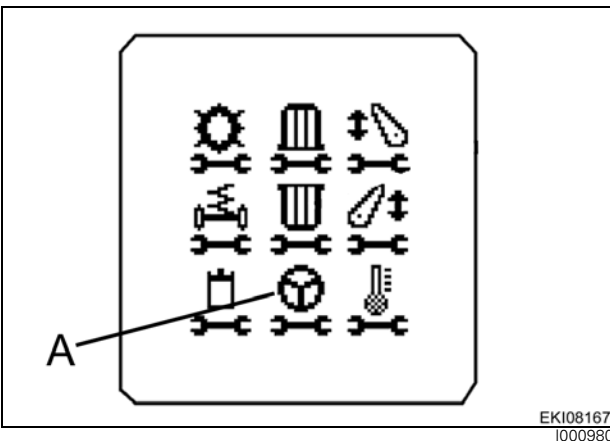


The following appears on the multifunction display in 2 main menu levels.



Press one of the buttons repeatedly until the symbol (A) flashes.



Press "Return" to confirm

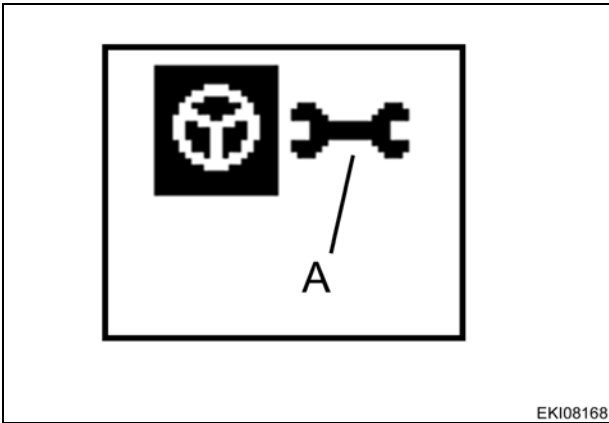


EKI08168
1000984



Press one of the buttons repeatedly until the symbol (A) flashes.



Press "Return" to confirm

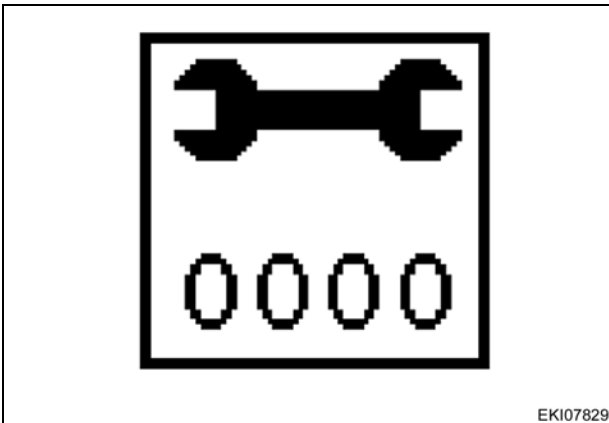

EKI07829
1000773

Calibration: B067 steering angle sensor
 Calibration code: **2401**

Calibration: Y087 Auto-Guide control valve

Calibration code: **2403**




Repeatedly press one of the keys repeatedly until the desired figure shows.



Press "Return" to confirm


Check Orbitrol steering

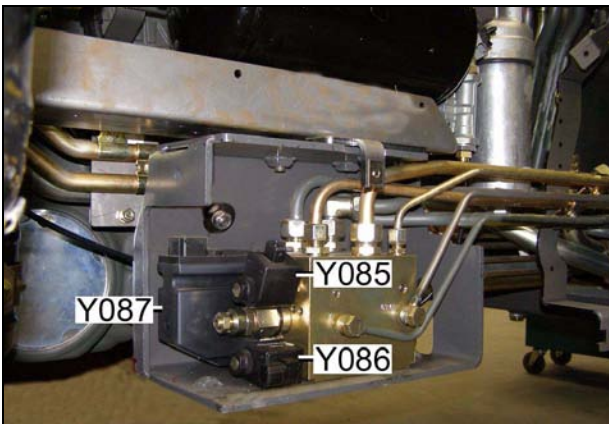

1001987




Y085 solenoid valve for automatic track guidance switch-off
Y086 steering disconnect solenoid valve
Y087 Auto-Guide control valve

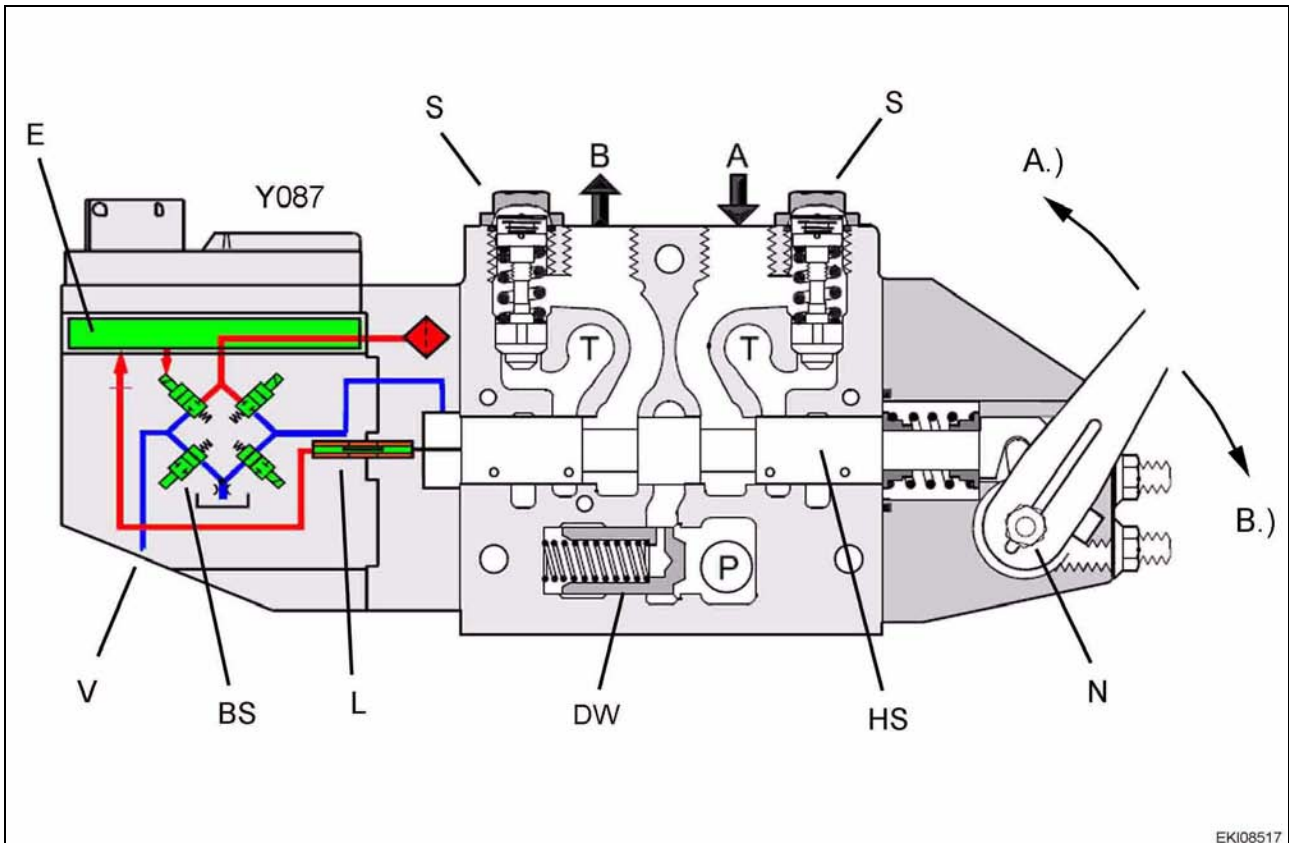

EK108517
1002336

Item	Designation	Item	Designation
Y087	Autoguide control valve	DW	Pressure compensator
A	Steering to left	E	Electronics
B	Steering to right	HS	Main actuator
T	Return flow	L	Position sensor
p	Pump pressure	N	Manual operation of the Y087 control valve – Engine is running, pump pressure is applied A.) Turn emergency actuation to the left – tractor steers to right B.) Turn emergency actuation to the right – tractor steers to left Note: Note: Steering wheel turns also!
BS	Bridge circuit	S	Shock valve
		V	Pilot control unit

Starting up the Auto-Guide system

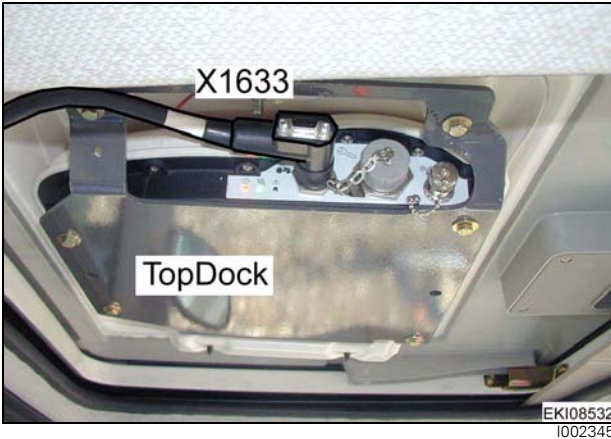


The A058 Auto-Guide TopDock must be installed to start up the Auto-Guide system.

NOTE:

The A058 Auto-Guide TopDock is not part of the "Auto-Guide preparation" installation kit.

Auto-Guide ceiling compartment (F900 Vario COM III)

Assembly Instructions

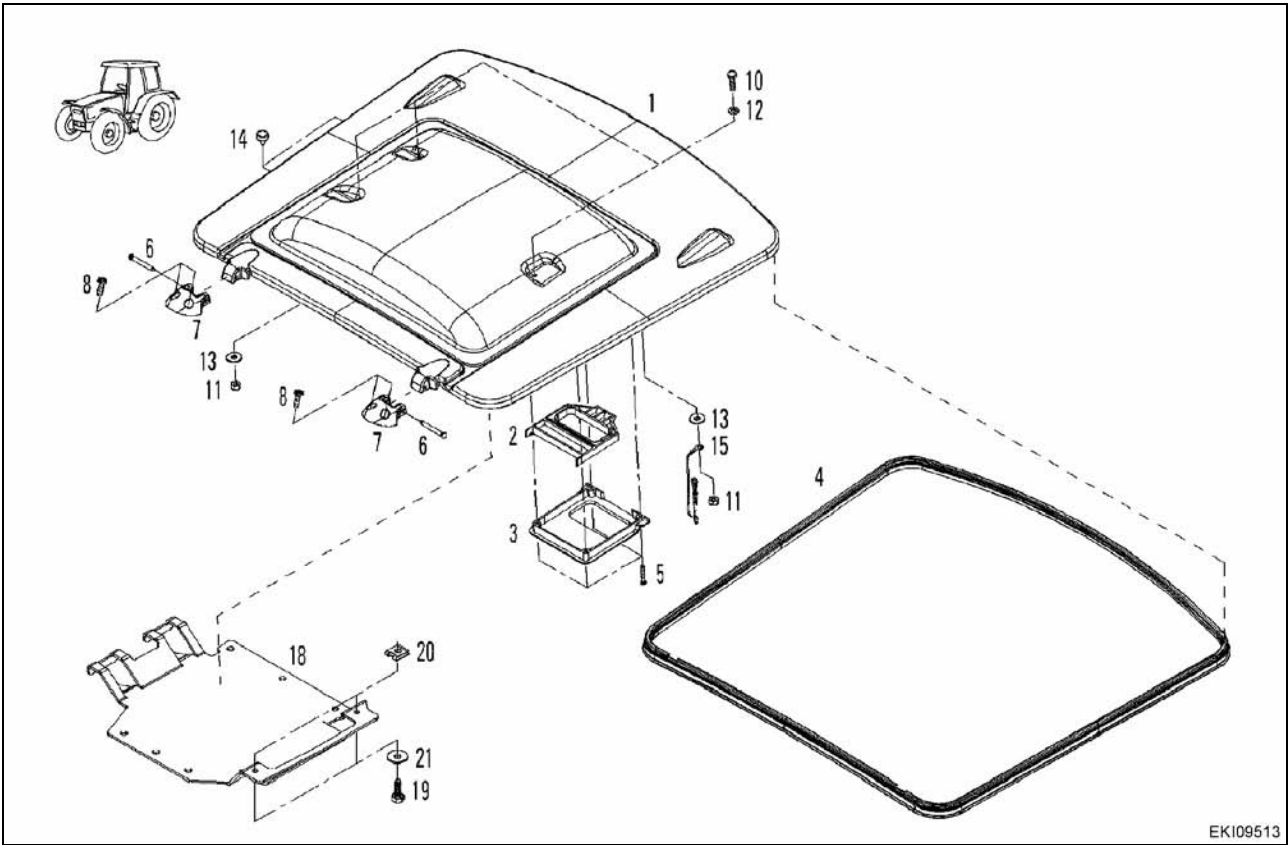

Item	Designation	Part number
1	Ceiling compartment	H 931.812.020.200
2	Handle shell	816.810.020.250
3	Handle bearing	816.810.020.260
4	Gasket	931.812.020.230
5	Oval-head screw	X 473.514.500.000
6	Hinge pin	816.810.050.101
7	Hinge	931.812.020.310
8	Oval-head screw	X 473.520.600.000
10	Hex screw	X 487.520.741.000

Item	Designation	Part number
11	Hex nut	X 434.102.240.000
12	Washer	X 450.005.108.000
13	Washer	X 454.305.108.000
14	Plug	816.810.260.061
15	Fuse	G 931.812.020.210
18	Retaining panel	931.812.020.200
19	Sheet metal screw	X 459.327.500.000
20	Sheet-metal nut	X 435.706.000.000
21	Washer	X 454.306.308.000



EKI05647
I001366


The A059 Auto-Guide terminal must be installed to start up the Auto-Guide system.

NOTE:
The A059 Auto-Guide terminal is not part of the "Auto-Guide preparation" installation kit.



EKI08533
I002348

Connect +supply to A059 Auto-Guide terminal.

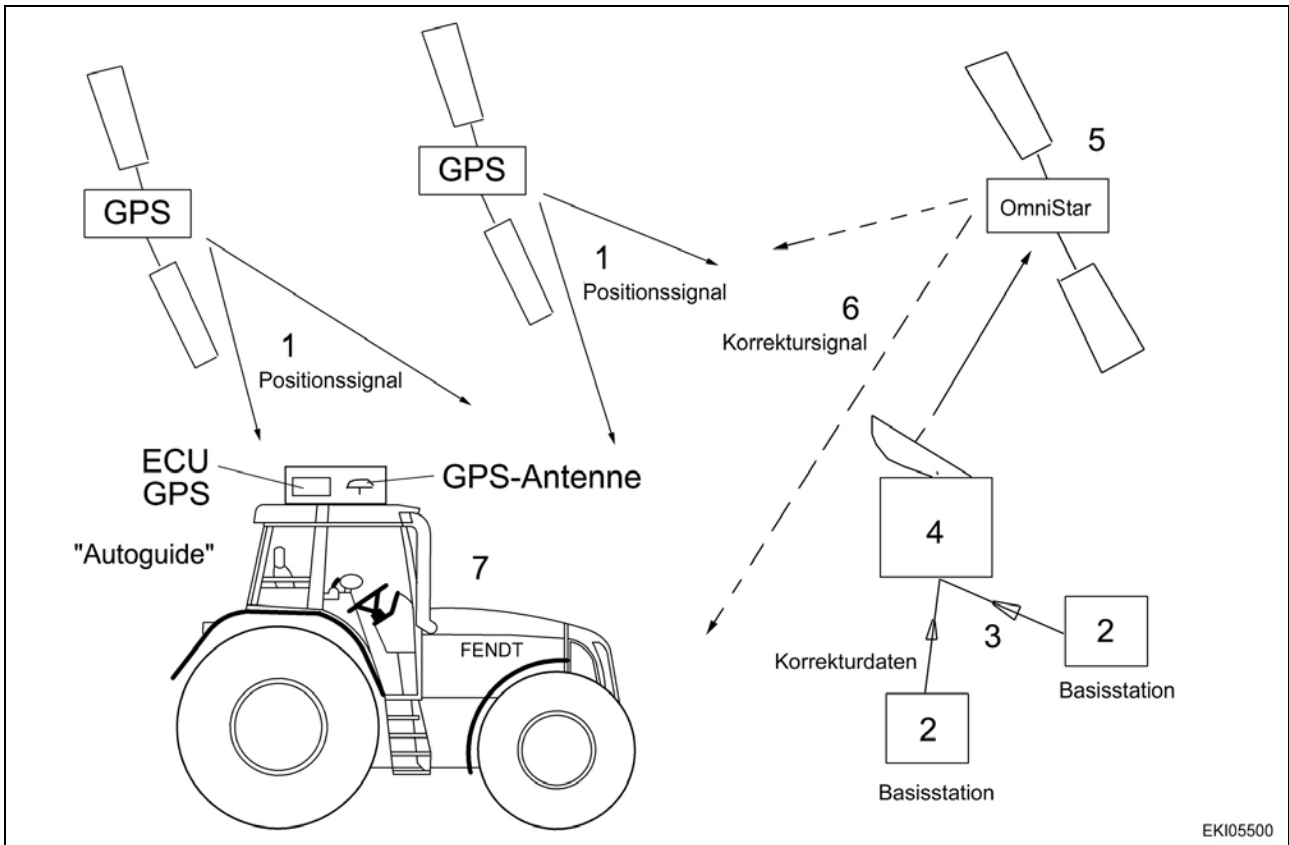

EKI05500
1002610

Assembly Instructions

NOTE:

Starting up the Auto-Guide system

See also:

Training documentation for the F900 Vario COM III Auto-Guide system

X 990.005.459.000 de (German)

X 990.005.459.010 en (English)

X 990.005.459.020 fr (French)

X 990.005.459.030 it (Italian)

X 990.005.459.040 es (Spanish)

X 990.005.459.060 nl (Dutch)

NOTE:

The Auto-Guide fitting instructions are also available on AGCO NET in the following languages:

- German**
- English**
- French**
- Italian**
- Spanish**
- Dutch**